

INVOC

**H
POWER HA**

USER

Please read over this manual

Thanks for using our 600w haze machine.

Function:

Information

Heat-up Time: 12 minutes

Time and ration control


Smog oil capacity: 1.5L

Weight: 9KG

Output: 2000cu. ff/min

Voltage: AC127v 60Hz

Powder: 600W

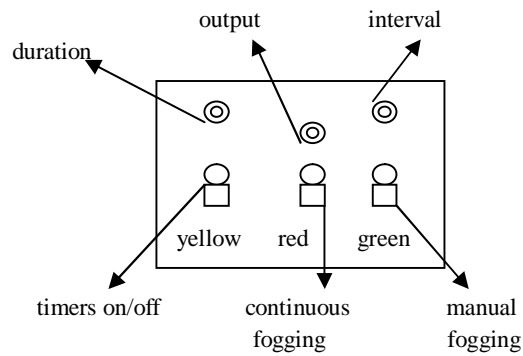

Line control operation:

1. When the green LED lights, the smog machine can work. Press the green button, spray smog
2. Setting that red button pressed, the red LED lights, the machine can spray anytime.
3. Setting that the yellow button pressed, the yellow LED lights, when the green LED lights, you can set the duration and the interval and the output.

Attention:

Please obey all notices about operation. Safe and repair to avoid getting an electric shock and keep the excellent effect.

Keep clean

Use in door.

The power must same as located.

Put in the horizontal direction and don't incline and place upside down.

Power off or pull out plug after use.

No waterproof, if there are some humidity, water or fog liquid in it, please switch off power and contact distributor as soon as possible.

There are no spare parts with machine. If you need to repair it, please contact distributor or professional repair works.

Avoid fire

Only for adults operate. Equip it over the touch of children and pay more attention during operation.

Don't spray it to people directly and far away fire.

The temperature of smoke is very high so that keep the space between machine and other material things more than 100cm.

Put the machine at a drafty place and don't cover the cool holes to keep the best cool effect. Keep the space between the smoke machine and around things more than 20cm and between smoke machine and tinder more than 20cm. And without easily burnt things within 300cm

Avoid explode:

Don't add tinder liquid such as oil, gas, perfume and etc. in fog machine.

Pay more attention to all notices sign and operation instructions on all machines.

Please use the high quality fog liquid recommended by distributors. Bad quality fog liquid may get

blast or spray oil.

Often check whether there has enough fog liquid.

Get out all fog liquid before transport or post.

Don't eat fog liquid otherwise to see the doctor immediately once fog liquid touches them.

Remove package and check:

1. Open carton to check whether all necessary. Please contact distributor if there is something missing.
2. Check the appearance of machine and power line. Please contact distributor once you find something wrong.

Installation:

1. Take away all pack material especially the spray gun.
2. Set in the horizontal direction and open the cover.
3. Add high quality fog liquid in the machine and the liquid will damage fog machine.
4. Plug the plug of remote console in the socket of the machine.

Operation:

1. Iconnect the power line to the power socket and the machine heat. The red LED of line console will light.
2. Press red key, the machine will spray fog (Press red key).
3. The red LED of remote console light or not light itself.
4. Can set the machine at a high place (with hand) directly and the lean angle should less than 15°.
5. Often check whether there has enough fog liquid and damage to the machine if there has no fog liquid.
6. If the fog is small, plum has noise or there has no fuse, the connector of remote console and power line, check these parts, please stop check and send it back.

Repair:

Please clean the fog machine timely to avoid the machine charge.

Don't make the fog machine be dirty. Screw the cover. After about 40 hours continually use, please use 800W dirty in refractory pipe.

Disassemble the spray mouth and use vinegar to clean. Reequip the spray mouth after cool and add fog liquid.

Others:

Clean timely to extend the lifespan of machine.

Use dry cloths to clean machine and keep dry while

http://acctech.ru/cat/generator_tumana/