

INVOC

**B
POWER BUB**

USER

Please read over this manual

Introduction

Thank you for choosing this Bubble Machine. You now own a rugged and powerful state-of-the-art machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to exceptional performance from your Bubble Machine for years to come.

Please follow these operation, safety and maintenance instructions to ensure along and safe life for your Bubble Machine.

Specifications:

Model No.: BM300

Remote Control

Tank Capacity: 2.5L

Approx.Bubble Projection:5meters

Weight:: 14kg

Voltage: 220-250V 50/60Hz

Power: 300W

Size: 45*39*41cm

Unpacking & Inspection

Open the shipping carton and check that all equipment necessary to operate the system has arrived intact. In addition to the Bubble Machine, you should receive the following items:

1. This user manual.
2. A set of remote control.

Before beginning initial setup of your Bubble Machine, make sure that there is no evident damage caused by transportation.

In the event that the unit's housing or cable is damaged, do not plug it in and do

Setup

1. Remove all packing materials from the machine. Do not attempt to use it until after contacting the manufacturer.
2. Place bubble machine on a flat surface.
3. Loosen the side screws and lift the housing lid.
4. Pour bubble liquid into the liquid tank, to the maximum fluid level. Do not overfill.
5. When the container is full, lower the housing lid.

IMPORTANT SAFETY NOTICE:

Ensure your bubble machine is unplugged from the power source before attempting to open the housing.

To help avoid accidental exposure to dangerous parts, safety screws are fitted that require a screwdriver to be removed, the finger screws can be undone by hand.

Once the screws are removed, the lid of the housing can be lifted upwards, as shown above. Take care not to touch the internal parts of the unit.

The fluid tank is designed to fit only one type of bubble liquid correctly, as shown above, with the lower cap.

Never aim the output at open flames.

Position output of bubbles away from people.

OPERATION

Turn on the power switch located on the back of the unit. Notice that the internal bubble drum and fan will start to produce bubbles.

http://acctech.ru/cat/mashiny_mylnyh_puzzyry/