


# DMX Indoor LED flood, 24\*tri-3W

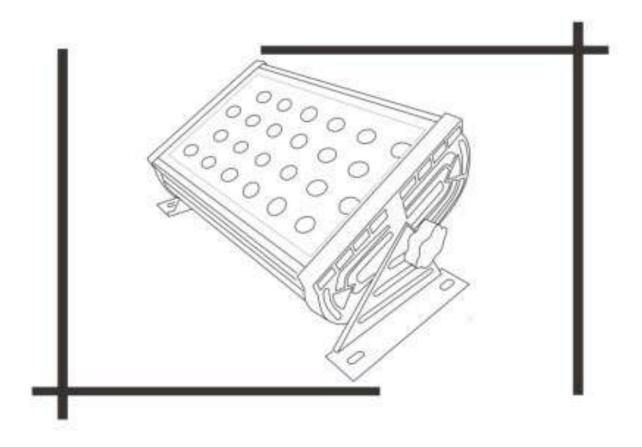


Item No.: LEDARCH300T

USER MANUAL

# Indoor LED flood, 24\*tri-3W Manual

Our indoor LED flood light(with 24\*tri-3W LEDs) advantage is obvious, its operation is much easier, moreover, it can make very even color mixing, bright, colorful and dynamic light scenery effects. It is widely applied to entertainment halls, clubs and stages etc.

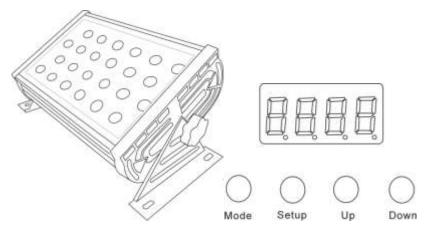

#### A. SPECIFICATION:

1. Weight: 5.7kgs

2. Size: 41x23x15.5cm

3. Power input: AC 120V/240V, 60Hz/50Hz

4. Wattage: 108W

5. LEDS: 24\*tri-3W LEDs

6. Beam angle: 40 degree, 25 degrees available upon request.

7. 3PIN female XLR socket and 3PIN male XLR socket

8. Built-in microphone

9. Built-in programs, auto run, sound active, DMX mode and M/S mode.

10. Fan cooling inside.

11. LED display for easier operation.

#### **B. OPERATION:**

After power on, Press "MODE" button to activate the main menu: Built-in programs mode, Auto running mode, DMX mode, Slave mode, Sound active mode.

"SETUP" is to set the relative specification for current mode.

"UP" is to add the value of current specification.

"DOWN" is to decrease the value of current specification.

Built-in programs-- running one of the built-in programs

Auto run—running built-in programs one after another in continuous loop.

DMX mode--controlled by DMX controller

Slave mode—the projectors in this mode will be synchronously run with the projectors in master mode

Sound active mode-- running by sound - activated

#### 1. built-in programs mode

With our indoor LED flood light, 24\*tri-3W, you can select 7 different built-in Programs.

Press "MODE" button, when it shows: **Pr.D** (Pr01), it means you can select the 7 built-in programs by pressing "UP" "DOWN".

When it is Pr01 which is for static color, press "SETUP"button for the first time, it shows 7rGb, then select 7 different static colors by pressing "UP" "DOWN". press "SETUP"button for the second/third/fourth time, it shows r255/G255/b255, then you can choose the different color grade by pressing "UP" "DOWN". press "SETUP"button for the fifth time, it shows FS00, then you can set Flash frequency.

Pr02 is for 7 colors fading, Pr03 is for seven colors jumping, Pr04 is for colors dream, Pr05 is only for red color fading, Pr06 is only for green color fading, Pr07 is only for blue color fading. You can set the running speed and flash frequency by pressing "SETUP"UP" "DOWN".

#### 2. Auto run mode

Press "MODE" button, when it shows: ALTO, press "SETUP"button for the first /second/third time, then it shows: SP00/FS00/Fd00, then you set running speed/flash frequency/fading speed by pressing "UP" "DOWN".

#### 3. DMX mode

You can control the devices individually via your DMX-controller.

Press "MODE" button, when it is **d.00**, it is DMX mode. You can set DMX value by pressing "UP" "DOWN". If press "SETUP" button, it shows: **d-P1** (d-p1) or **d-P2** (d-p2), You can choose different DMX mode by pressing "UP" "DOWN".

#### DMX mode 1: d-P1

CH1	CH2	СН3	CH4	CH5
R	G	В	RGB dimming	Flash
OFF	OFF	OFF	OFF	1-5 no use
0-255 R dimming	0-255 G dimming	0-255 B dimming	0-255 RGB dimming	6-255(slow-fast) Flash

### DMX mode 1 : d-P2

CH1		CH1	CH2	CH3
NO	DMX value	FUNCTION	SPEED	FLASH
1	035	PROGRAM01		
		7color fading		
2	3671	PROGRAM02		
		7color jump		
3	72107	PROGRAM03		
		color dreaming	SPEED	
4	10814	PROGRAM04	0—255	FLASH
	3	red fading		0—255
5	14417	PROGRAM05		
	9	green fading		
6	18021	PROGRAM06		
	5	blue fading		
7	21625	Sound active	Sensitivity	
	5	Sound active	0255	

# 4. Slave mode

press "MODE" button to select **5** L **R** u to run the slave mode.

## 5. Sound active mode

press "MODE" button to select sound active(SU31) to be run, press "SETUP" button, then you can press "UP" or

"DOWN" buttons to adjust the sensitivity

Sensitivity: SU01-SU31

