


USER MANUAL

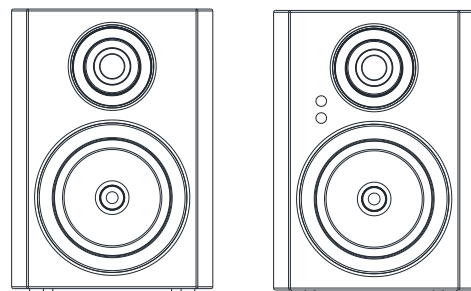

Jamo®

C707PA MKII

2.0BT Active

IMPORTANT SAFETY INSTRUCTIONS!







The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.




The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read instructions.
2. Retain these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified b the manufacturer.
12. use only the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, used caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
16. An appliance input coupler is used as the disconnect device-the disconnect device shall remain readily operable.


CARE AND CLEANING

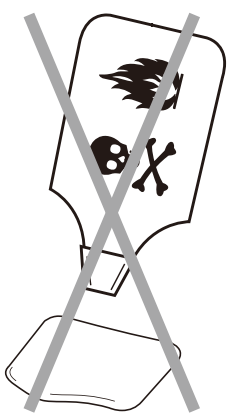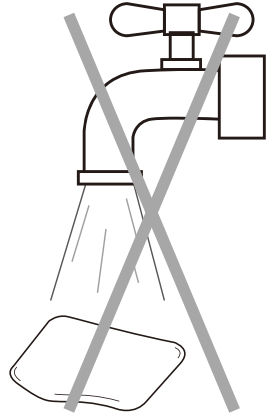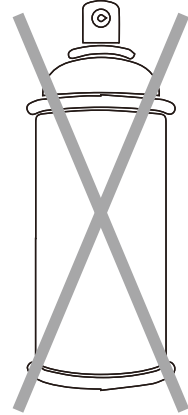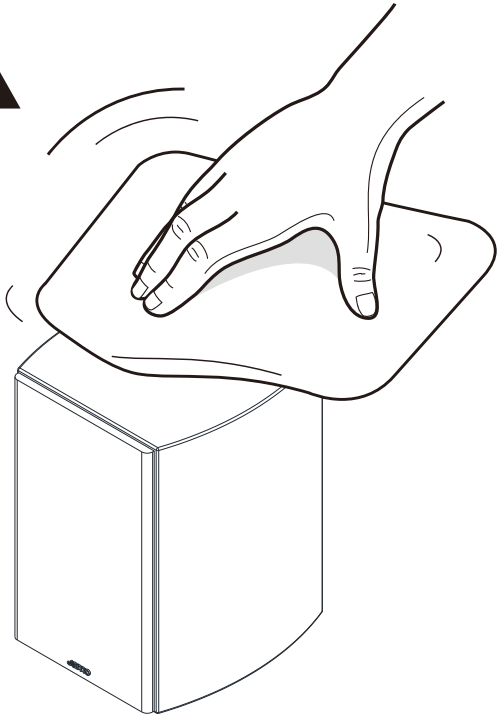

PLACEMENT

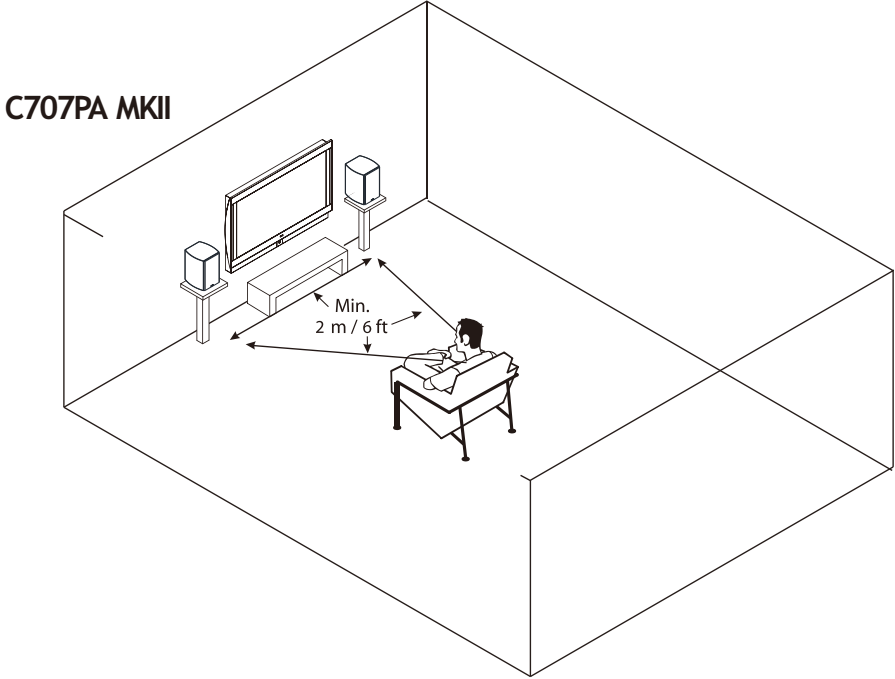


SETUP

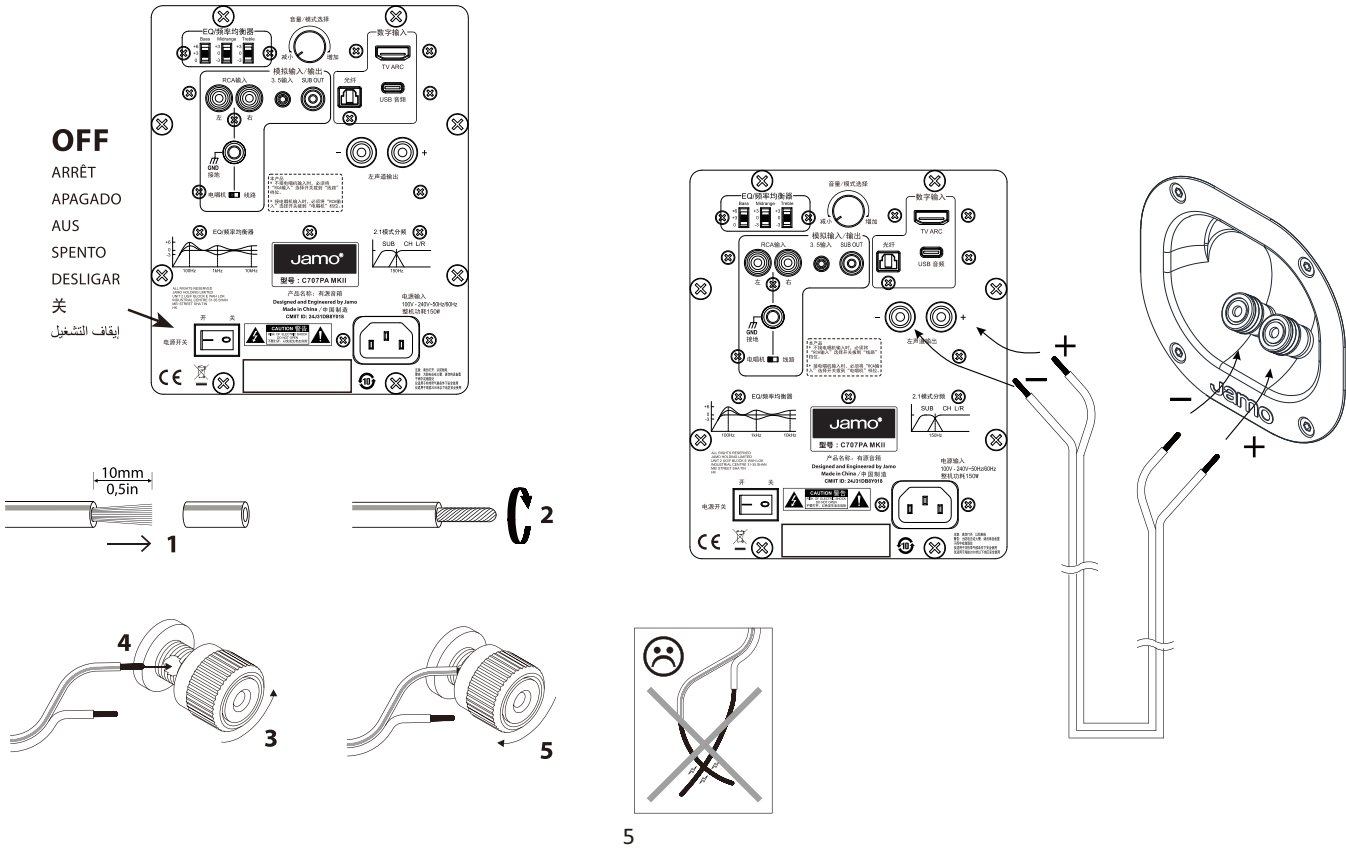

Function Description


Rear panel

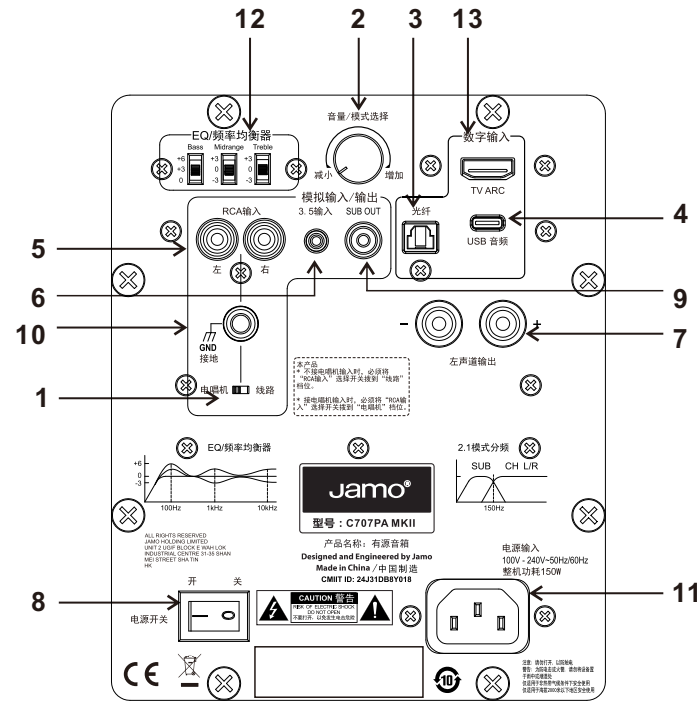

1. Electric record player/line level selection switch.
Note: When this product is not connected to a turntable input, the "RCA input" selection switch must be turned to the "line" position.
When connecting the input of the turntable, the "RCA input" selection switch must be turned to the "turntable" input position.
2. Increase/decrease volume/input selection.
(The order of switching is "RCA → 3.5 (AUX) → Fiber Optic → Bluetooth → USB → TV → RCA → ...").
3. Fiber optic input.
4. USB Audio Input Port: This port can be used to connect PCs, smart phones, tablets, or other mobile devices for music playback. To ensure proper functionality, users need to select appropriate data cables according to the type of external device being connected. When connecting to a Windows PC: A standard data cable with a Type-C plug is sufficient for normal operation. When connecting to Apple computers, smart phones, tablets, or similar mobile devices: An OTG - enabled data cable is required for proper connectivity
Note: Charging cables that lack data transfer capabilities cannot be used for connections.
5. RCA input for right/left RCA stereo plug, from CD/DVD/home theater player.
6. Auxiliary audio input for iPod, iPhone, iPad, PC, 3.5mm jack for mobile phones, etc.
7. Left speaker output signal output, used to connect the left passive C707PA MKII speaker.
8. Power on/off.
9. Ultra low frequency line output interface. Inserting a lotus line speaker will switch to 2.1 mode. At this time, the low-frequency part of the left and right channel frequency response will be attenuated. Therefore, do not insert any lotus line into this interface when not connected to an external subwoofer for use.
10. Grounding.
Attention: When connecting an external turntable, be sure to connect the ground wire of the turntable to this grounding pole.
11. Power input.
12. EQ regulation.
13. TV input (only used for connecting ARC/eARC interfaces to TV).

Remote control

1. Press the standby button to enter/exit standby mode.
2. Previous track, play/pause, next track.
Long press (hold for more than 3 seconds) is the Bluetooth pairing key.
3. Ultra low frequency output increases by "+" and decreases by "-";
4. Short press is the reset button.
Press to cycle through input modes.
5. LED brightness key, Press to cyclically adjust the brightness of the LED indicator light.
6. Enter the selection button.
Press to cycle through input modes.
7. Press the volume button "-" to decrease the volume.
Press "+" to increase the volume.
8. Surround sound effect key, Press to cycle through the strength of surround sound effects.

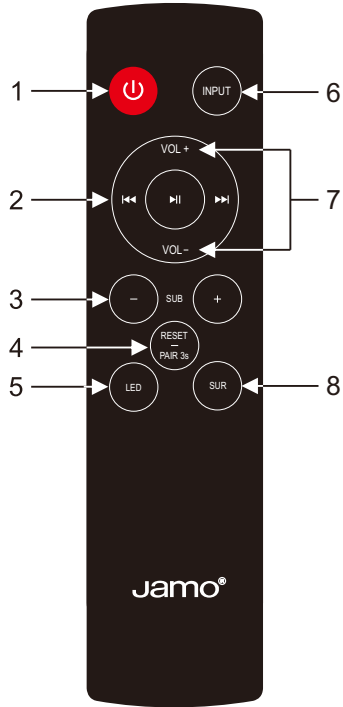

Function Description

1. Fiber optic digital input interface The fiber optic digital input interface supports S/PDIF digital audio input. It cannot decode and playback digital signals encoded by Dolby, DTS, etc., and the amplifier output may be abnormal. Therefore, please confirm whether the audio file played by the signal source is not encoded as mentioned above before use.

2. Volume/Mode Selection Knob The volume/mode selection knob on the back panel has three functions. Rotate it to the right/left to adjust the volume, and press the knob briefly (press time<1 second) to switch the input mode. The order of switching is "RCA → 3.5 (AUX) → fiber optic → Bluetooth → USB → TV → RCA →..."; Long press the knob (press time>3 seconds) for Bluetooth pairing function. For details on Bluetooth pairing function, please refer to the relevant instructions later.

3. Electric record player input This product has a built-in MM player and a dual hole RCA socket as the input interface for the player. It can also be used as a line level input interface. The switching between the two modes can be completed through the toggle switch on the back panel. When the switch is turned on the turntable position, the internal singing and playback circuit of the product will be connected. At this time, the RCA interface can only be used to connect with a vinyl turntable without built-in singing and playback. At the same time, the grounding wire on the turntable needs to be connected to the GND terminal on the back panel; If the switch is turned to the line position, RCA can connect any device with line level output, such as built-in record players, CD players, DVD players, tape cartridges, etc.

Special reminder: When this product is not connected to a vinyl record player without built-in playback, the turntable/circuit switch must be set to the "circuit" position. This is because the input level signal of the playback is extremely high. When not in use, turn it off to avoid external interference entering the product as much as possible; At the same time, when connecting an external turntable, it is necessary to connect the ground wire of the turntable to the GND grounding pole, and also turn the "RCA input" selection switch to the "turntable" input position.

4. Power/status indication

This product uses RGB LED lights to indicate the status of the amplifier:

Green: Indicates RCA (PHONO) input.

Yellow: indicates 3.5 (AUX) input.

Red: indicates fiber optic input.

Purple: indicates TV (ARC/eARC) input.

Blue: indicates Bluetooth input. If Bluetooth is not connected, the indicator light will flash slowly; Bluetooth is in pairing mode, and the indicator light will flash rapidly; Bluetooth is in a connected state, and the indicator light will remain on continuously.

White: indicates USB input.

Amber: indicates standby mode, indicating that the product has entered standby mode.

Bluetooth

Bluetooth pairing connection and operation:

The Jamo C707PA MKII speaker supports Bluetooth audio input function and can be connected to Bluetooth devices such as mobile phones and computers to play music.

If you are using the Bluetooth function of the Jamo C707PA MKII speaker for the first time, you need to pair and connect the Jamo C707PA MKII speaker with your Bluetooth device such as your phone or computer before you can play back and output audio from your device normally.

The specific operation is as follows:

1. Turn on the power of the Jamo C707PA MKII speaker, wait for 3 seconds, and at the same time turn on the Bluetooth function of your Bluetooth device.

2. Long press (about 3 seconds) the  " button on the remote control or the "VOLUME/SOURCE" knob on the back panel to put the Jamo C707PA MKII speaker into Bluetooth pairing mode. Once you do this, the indicator light on the speaker will display blue and flash rapidly, indicating that the speaker has entered pairing mode.

3. Turn on the Bluetooth function on your phone or Bluetooth device, then search for the Bluetooth device until the name "Jamo C707PA MKII" appears on the screen. Select 'Jamo C707PA MKII' to successfully connect with your device, and the indicator light on the speaker will display blue and stop flashing. If your phone or Bluetooth device requires a pairing code, please enter "0000" or "1234".

4. After successful pairing and connection, there is no need to perform the above operations on the next power on. You only need to turn on the speaker and your Bluetooth device, and they will automatically reconnect. If they cannot automatically reconnect, you only need to open the Bluetooth device list of your device, select Jamo C707PA MKII, and click connect.

5. If your Bluetooth audio device supports AVRCP protocol, you can remotely control the playback and selection of music through the "Previous  /Play/Pause  /Next  " button on the remote control.

Parameter specifications


Frequency response [± 3] dB [Hz]:	50-20KHz
Sensitivity [2.83V/1m] [dB]:	88 dB±2dB
Impedance:	4 Ohms
Amplifier type:	CLASS-D
Output power:	2 x 65W (RMS) @4ohm THD < 1%
Input voltage:	AC100V-120V/60Hz or 220-240V/50Hz
Input interface:	Bluetooth 5.0 /USB Audio /Jack 3.5/RCA(Line/Phono)/Optical/TV ARC
Output interface:	SUB out RCAx1 (20~160Hz ±3dB)
Bluetooth:	V5.0 aptX / aptX HD / SBC / AAC
Automatic standby function:	If there is no music signal input for a long time (about 20 minutes), it will automatically standby
Standby power consumption:	<0.5W meets the standard requirements of the EU ERP Directive
Remote control function:	support
Frequency divider [Hz]:	2500 Hz
High frequency speaker:	1 "(25.4mm) DDT shock absorption high-frequency technology waveguide technology
Low frequency speaker:	5.25 "(135mm) HCC Hard Cone Basin Metal Center Phase Plug Technology
System/enclosure type:	Reverse box
Connect input (s):	Single line
Size (WxDxH):	212x230x295mm
Net weight:	11.8 KG



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK

使用注意事项

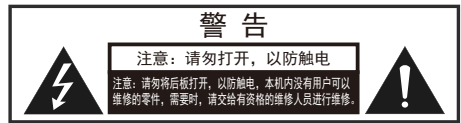





等边三角形中有箭头闪电标号的图形表示警告使用者在产品内有非绝缘的“危险电压”，可能会对人体造成很大的电击危险。




等边三角形中有感叹号的图形表示警告使用者该设备在操作与维护(维修)方面应严格按照所附设备说明书。

- 1) 请详细阅读、保留本使用手册，并遵照本手册的说明进行操作。
- 2) 请注意手册上所有的警告及注意事项。
- 3) 请勿将本产品安装于或靠近会发出热源的地方，如：电热器、电热线圈、火炉等；不能在机箱上放置明火源，如：点亮的蜡烛等。
- 4) 长时间不使用本机时须将插头拨离电源插座，从插座拔出插头时应抓住插头将其拔出。
- 5) 为了完全切断本机电源，电源插头应完全中断机器的电源供应，电源插座必须置于使用者容易接近的地方。
- 6) 请不要靠近水源或有水花溅出的地方使用本产品或任何液体或物品渗入或进入本产品。
- 7) 勿打开后板或改装本机。
- 8) 遇到产品故障或任何有关故障维修的事宜，请咨询认可的维修或服务人员。
- 9) 为避免机体的表面刮伤，我们建议您使用干的软质布料清洁本产品，请勿使用含酒精成份或清洁剂来擦拭机箱以避免损害机体表面的漆质。
- 10) 请不要让儿童使用遥控器或将遥控器放置于儿童可以拿到的地方，不当的处置电池可能会引起火灾或化学性腐蚀，请勿将电池直接进行充电、拆解、加热，焚毁或放置于高热(摄氏100度)的地方。


保养与清洁

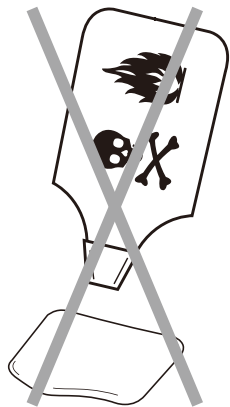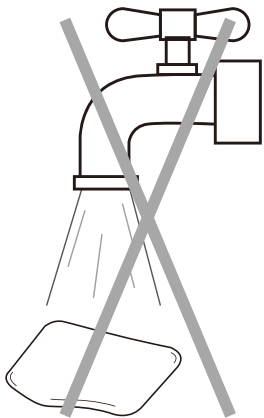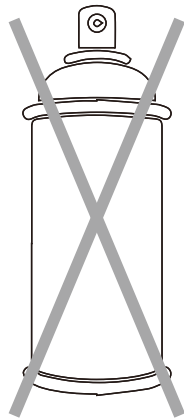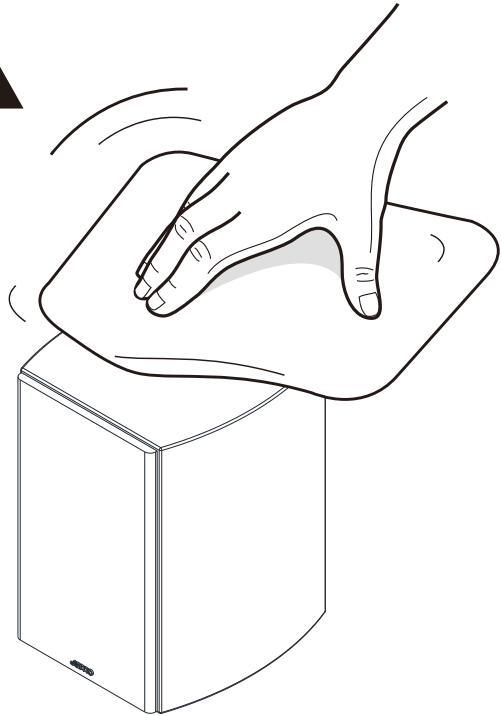

布置

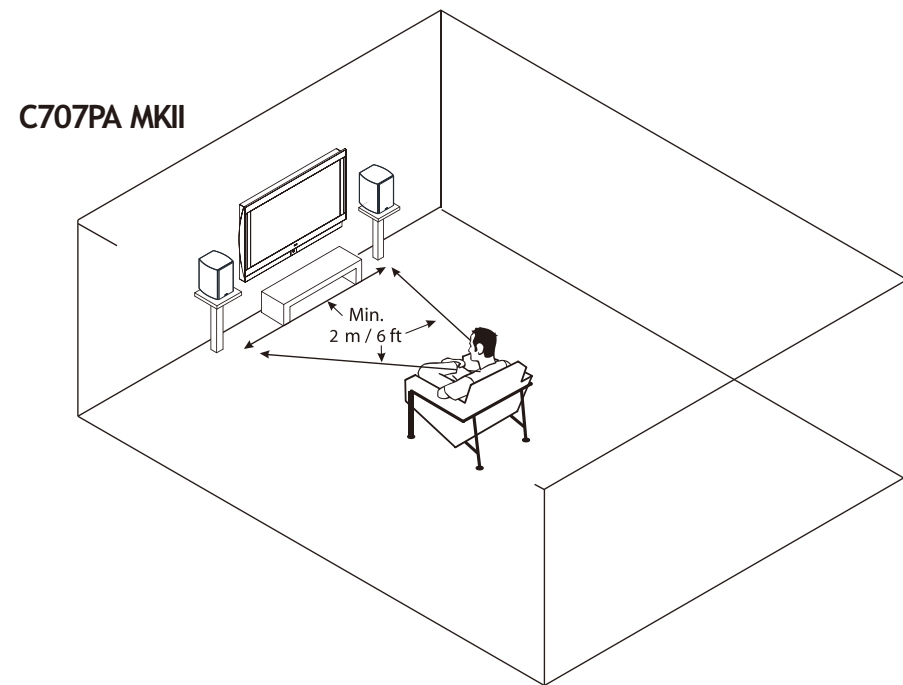


设置

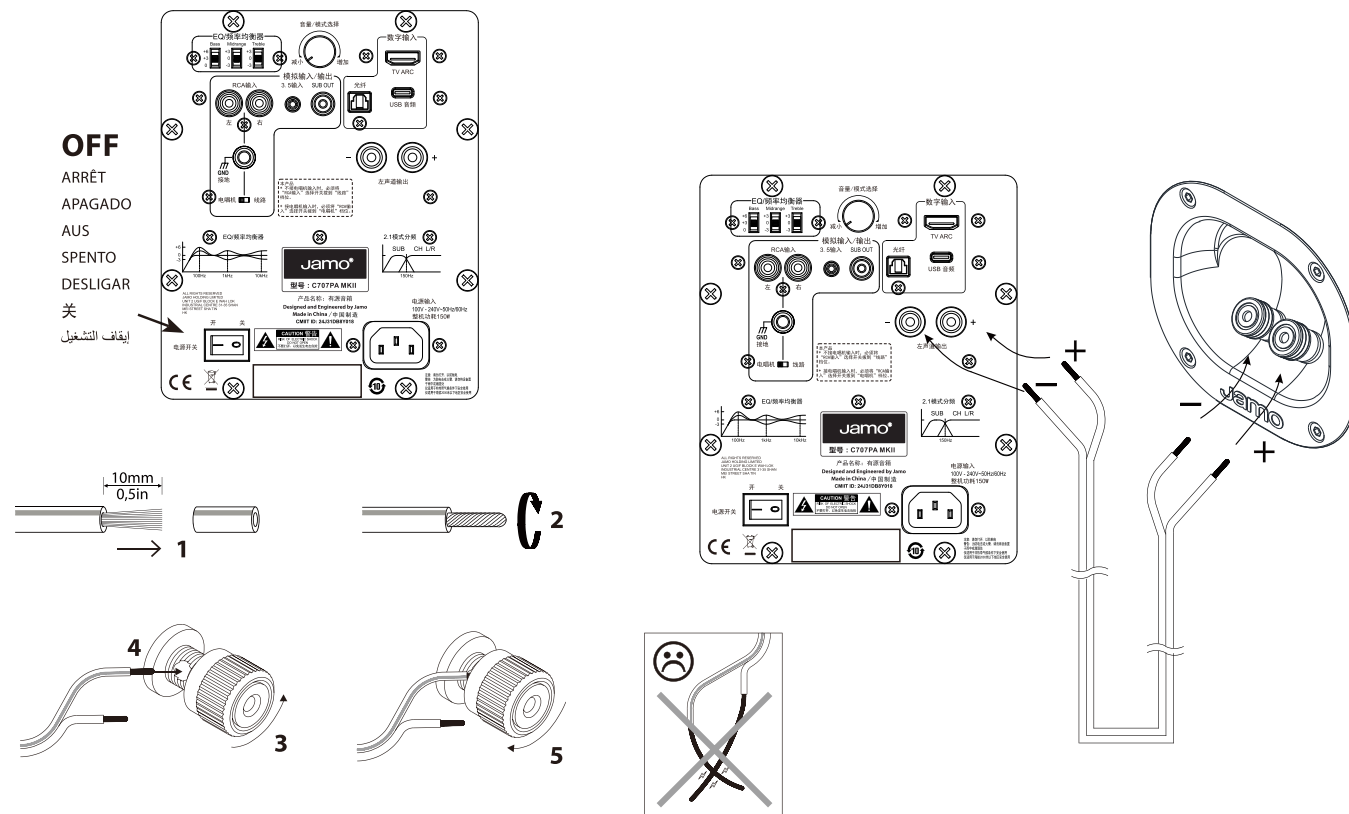

功能说明


主箱功放后板

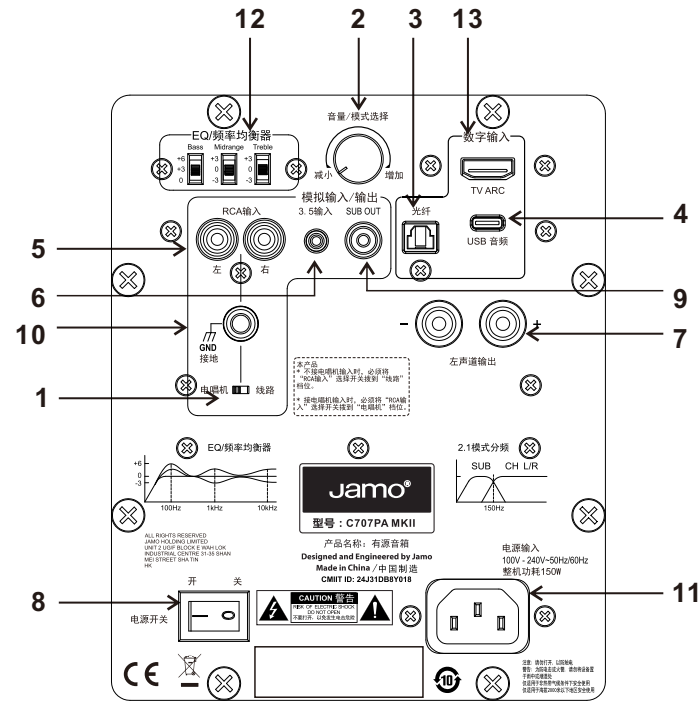

- 1、电唱机/线路电平选择开关。
注：本产品不接电唱机输入时，必须将“RCA输入”选择开关拨到“线路”档位。
接电唱机输入时，必须将“RCA输入”选择开关拨到“电唱机”输入档位。
- 2、增大/减小音量/输入选择。
(切换的顺序依次为“RCA→3.5 (AUX)→光纤→蓝牙→USB→TV→RCA→...”)。
- 3、光纤输入。
- 4、USB音频输入接口，可用于连接PC或手机、平板电脑等移动设备来播放音乐，为了能正常工作，用户需根据将要连接的外部设备类型来选择合适的数据线。当连接windows系统的PC使用时，只需一条带有type-c插头的数据线即可实现正常连接。如果要连接苹果电脑或手机、平板电脑等移动设备使用时，用户则需要使用一条带有OTG功能的数据线，才能正常连接使用。
温馨提示：早期的一些充电线由于不能用于数据通讯是无法连接使用的。
- 5、RCA输入用于右/左RCA立体声插头，来自CD/DVD/家庭影院播放器。
- 6、辅助音频输入用于iPod、iPhone、iPad、PC、手机等的3.5毫米插孔。
- 7、左扬声器输出信号输出，用于连接左侧无源C707PA MKII 扬声器。
- 8、电源开/关。
- 9、超低音线路输出接口，插入莲花线音箱会切换至2.1模式，此时左右声道频响的低频部分会被衰减，因此在不连接外部低音炮使用时，不要在此接口插入任何莲花线。
- 10、接地。
- 注意：外接电唱机时，务必要将唱机的地线连接这个接地柱。
- 11、电源输入。
- 12、EQ 调节。
- 13、TV 输入（仅用于连接TV的ARC/eARC接口使用）。

遥控器

- 1、待机键按下可进入/退出待机模式。
- 2、上一曲目，播放/暂停，下一曲目。
- 3、超低音输出增“+”，超低音输出减“-”。
- 4、短按为复位键。
长按（按住保持3秒以上）为蓝牙配对键。
- 5、LED 亮度键。
按下可循环调节LED指示灯的亮度。
- 6、输入选择按键。
按下可循环切换输入模式。
- 7、音量按钮按“-”，音量减小。
按“+”，音量增大。
- 8、环绕声音效键。
按下可循环切换环绕声音效的强弱。

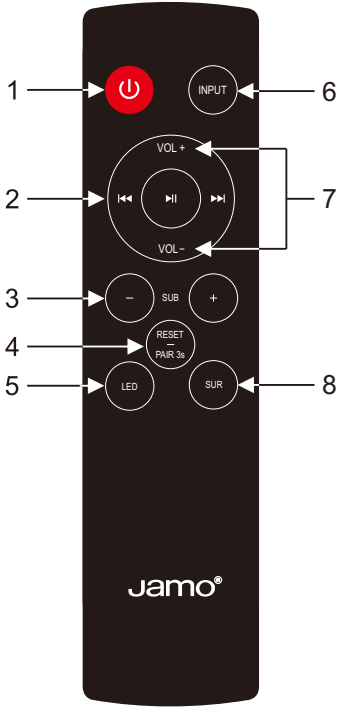

功能说明

1. 光纤数字输入接口

光纤数字输入接口支持S/PDIF数字音频输入，对杜比，DTS等编码的数字信号无法正常解码回放，功放输出可能不正常，因此在使用时请先确认信号源所播放的是否为非上述编码的音频文件。

2. 音量/模式选择旋钮

后板上的音量/模式选择旋钮具有三种功能，向右/向左旋转为音量加减控制，短按旋钮（按压时间<1秒）为输入模式切换，切换的顺序依次为“RCA→3.5(AUX)→光纤→蓝牙→USB→TV→RCA→…”；长按旋钮(按压时间>3秒)为蓝牙配对功能，关于蓝牙配对功能详见后面相关说明。

3. 电唱机输入

本产品内置MM唱放，双孔的RCA插座为唱放的输入接口，它同时也可以作为线路电平输入接口使用，两种模式的切换可通过后板上的拨动开关来完成。当开关打在电唱机位置时，产品内部的唱放电路将接入，这时RCA接口只能与无内置唱放的黑胶唱机连接使用，同时需要将电唱机上的接地线连接到后板上的GND接线柱上；如果开关打在线路位置，这时RCA可以连接任何带线路电平输出的设备，如内置有唱放的电唱机，CD机，DVD机，磁带卡座等。

特别提示：本产品在有无内置唱放的黑胶唱机连接使用时，必须将电唱机/线路开关设置在“线路”位置，这是由于唱放输入的电平信号极高，不使用时将其关闭，尽量避免外界干扰串入产品；同时，外接电唱机时，务必要将电唱机的地线连接GND这个接地柱，还有将“RCA输入”选择开关拨到“电唱机”输入档位。

4. 电源/状态指示

本产品使用了RGB LED灯指示功放的状态：

绿色：为RCA（PHONO）输入指示。

黄色：为3.5（AUX）入指示。

红色：为光纤输入指示。

紫色：为TV（ARC/eARC）入指示。

蓝色：为蓝牙输入指示，蓝牙未连接，指示灯将缓慢闪烁；蓝牙处于配对状态，指示灯将快速闪烁；蓝牙处于连接状态，指示灯将保持长亮。

白色：为USB输入指示。

琥珀色：为待机指示，指示产品已进入待机状态。

蓝牙

蓝牙配对连接与操作：

Jamo C707PA MKII音箱支持蓝牙音频输入功能，可连接手机电脑等蓝牙设备播放音乐。

如果您是首次使用Jamo C707PA MKII音箱的蓝牙功能，则首先要让Jamo C707PA MKII音箱与你的手机或电脑等蓝牙设备进行配对连接，之后才能正常回放输出您设备上的音频。

具体操作如下：

1. 打开Jamo C707PA MKII音箱的电源，等待3秒钟，同时打开您的蓝牙设备的蓝牙功能。
2. 长按(约3秒)遥控器上的“ ”键或后板上的“VOLUME/SOURCE”旋钮，让Jamo C707PA MKII音箱进入蓝牙配对状态。一旦您这样做，音箱的指示灯将显示蓝色并快速闪烁，这表示音箱已进入配对状态。
3. 打开您的手机或蓝牙设备上的蓝牙功能，然后搜索蓝牙设备，直到名称“Jamo C707PA MKII”出现在屏幕上。选择“Jamo C707PA MKII”即可与您的设备连接成功，音箱的指示灯将显示蓝色并停止闪烁。如果您的手机或蓝牙设备要求输入配对码请输入“0000”或“1234”。
4. 配对连接成功后，下次开机无需再进行上述操作，您只需打开音箱与您的蓝牙设备，二者就可自动回连，如果没能自动回连，你只需打开您设备的蓝牙设备列表，并选择Jamo C707PA MKII点击连接即可。
5. 如果您的蓝牙音频设备支持AVRCP协议，您可以通过遥控器上的“上一曲 /播放/暂停 /下一曲 ”键来遥控操作音乐的播放与选曲。

参数规格

频率响应 [±3] dB [Hz]:	50-20KHz
灵敏度 [2.83V/1m] [dB]:	88 dB±2dB
阻抗:	4 Ohms
功放类型:	CLASS-D
输出功率:	2 x 65W (RMS) @4ohm THD<1%
输入电压:	AC100V-120V/60Hz 或220-240V/50Hz
输入接口:	Bluetooth 5.0 /USB Audio /Jack 3.5/RCA(Line/Phono)/Optical/TV ARC
输出接口	SUB out RCAx1 (20~160Hz ±3dB)
蓝 牙:	V5.0 aptX / aptX HD / SBC / AAC
自动待机功能:	长时间 (约20分钟) 没有音乐信号输入 将自动待机
待机功耗:	<0.5W 符合欧盟ERP指令的标准要求
遥控功能:	支持
分频器频率 [Hz]:	2500 Hz
高频喇叭:	1" (25.4mm) DDT减震高音技术 波导技术
低频喇叭:	5.25"(135mm) HCC硬锥盆 金属中心相位塞技术
系统/箱体类型:	倒向箱
连接输入(s):	单线
尺寸(WxDxH):	212x230x295mm
净重:	11.8 KG



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK



使用注意事項




- ⚡ 等邊三角形中有箭頭閃電標號的圖形表示警告使用者在產品內有非絕緣的“危險電壓，可能會對人體造成很大的電擊危險。
- ⚠ 等邊三角形中有感嘆號的圖形表示警告使用者該設備在操作與維護（維修）方面應嚴格按照所附設備說明書。

- 1) 請詳細閱讀、保留本使用手冊，並遵照本手冊的說明進行操作。
- 2) 請注意手冊上所有的警示及注意事項。
- 3) 請勿將本產品安裝於或靠近會發出熱源的地方，如：電熱器、電熱線圈、火爐等； 不能在主機殼上放置明火源，如：點亮的蠟燭等。
- 4) 長時間不使用本機時須將插頭拔離電源插座，從插座拔出插頭時應抓住插頭將其拔出。
- 5) 為了完全切斷本機電源，電源插頭應完全中斷機器的電源供應，電源插座必須置於使用者容易接近的地方。
- 6) 請不要靠近水源或有水花濺出的地方使用本產品或任何液體或物品滲入或進入本產品。
- 7) 勿打開後板或改裝本機。
- 8) 遇到產品故障或任何有關故障維修的事宜，請諮詢認可的維修或服務人員。
- 9) 為避免機體的表面刮傷，我們建議您使用幹的軟質布料清潔本產品請勿使用含酒精成份或清潔劑來擦拭主機殼以避免損害機體表面的漆質。
- 10) 請不要讓兒童使用遙控器或將遙控器放置於兒童可以拿到的地方，不當的處置電池可能會引起火災或化學性腐蝕，請勿將電池直接進行充電、折開、加熱或改裝本機。 置於高熱（攝氏100度）的地方。


保養與清潔

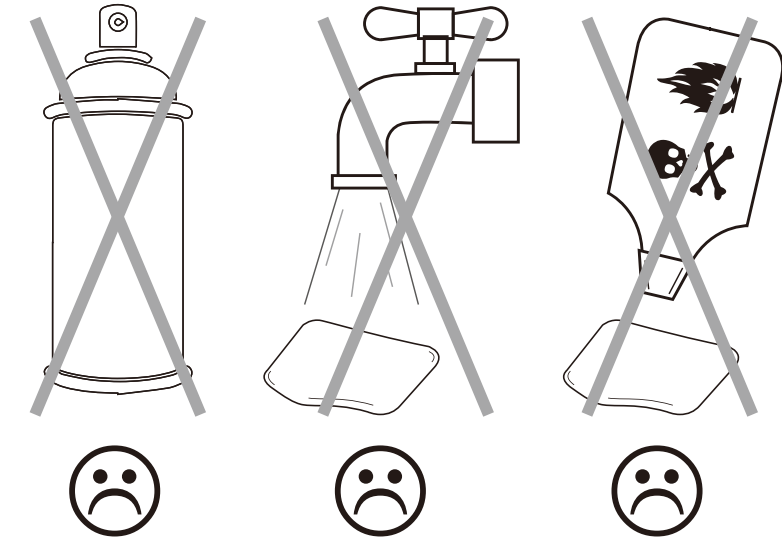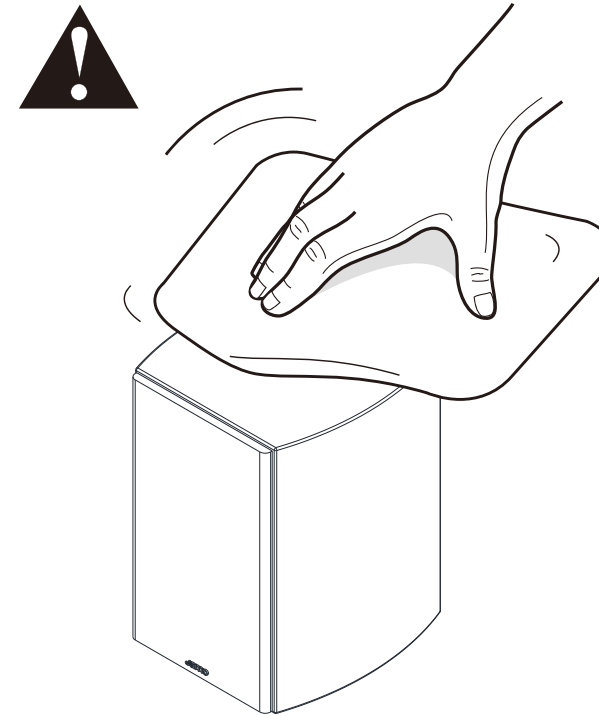

佈置

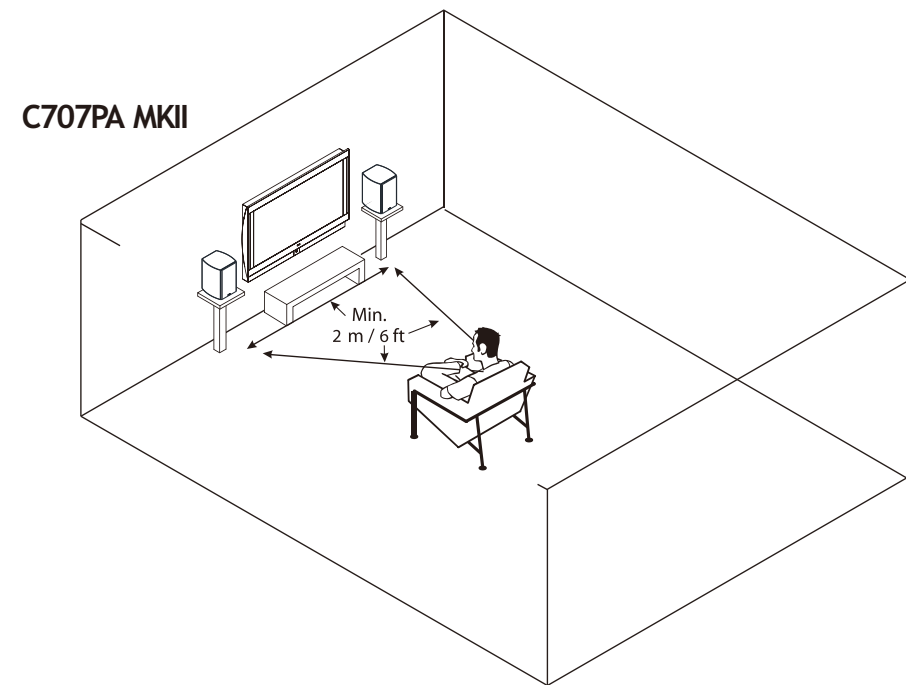


設定

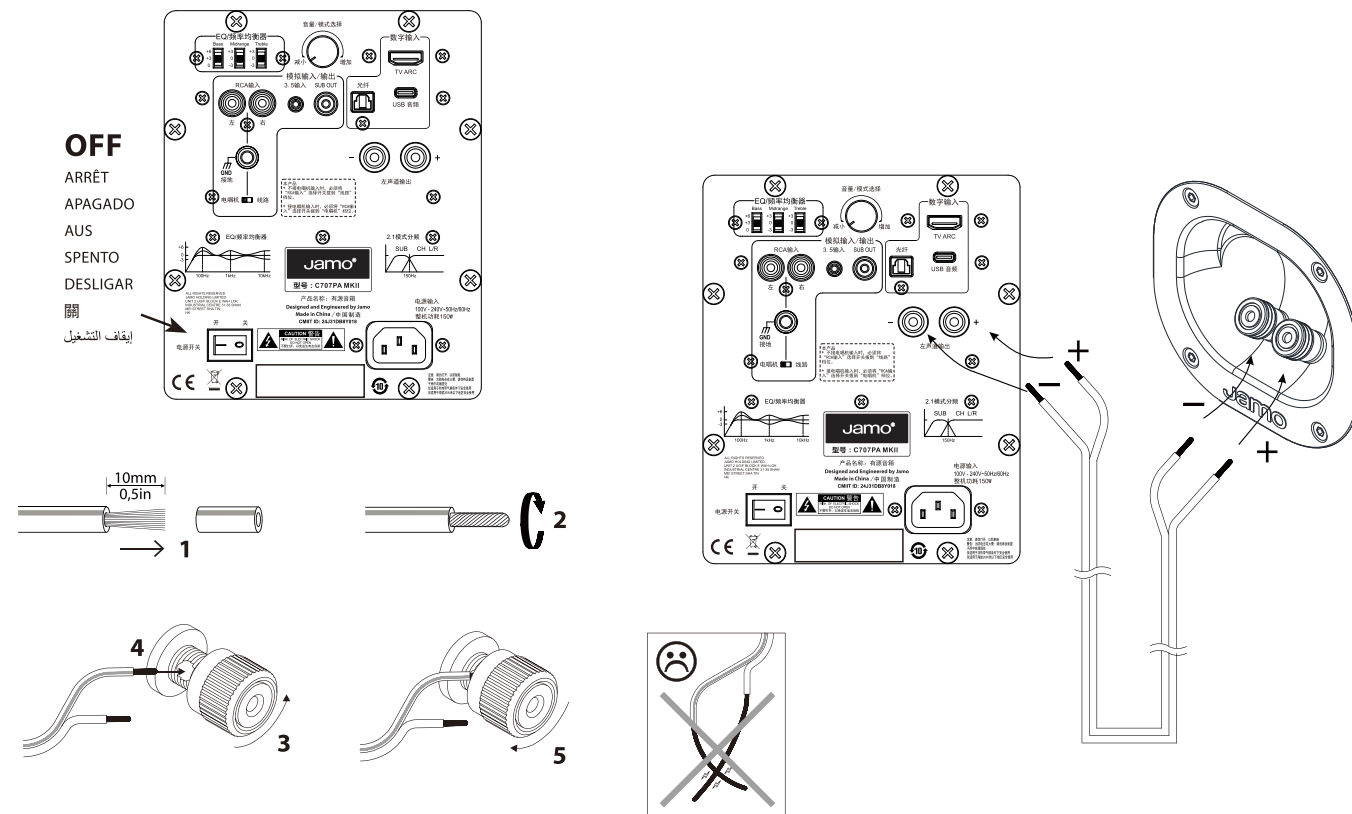

功能說明


主箱功放後板

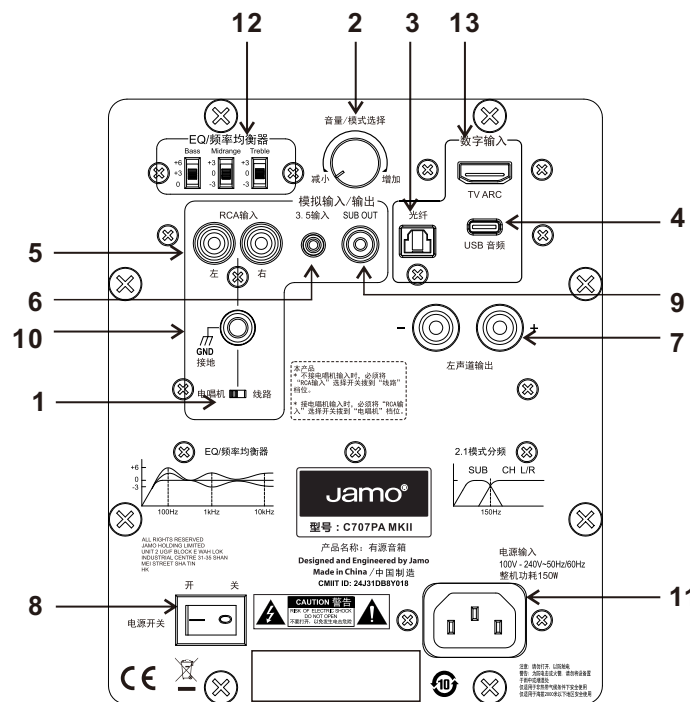

- 1、電唱機/線路電平選擇開關注：本產品不接電唱機輸入時，必須將“RCA輸入”選擇開關撥到“線路”檔比特。接電唱機輸入時，必須將“RCA輸入”選擇開關撥到“電唱機”輸入檔比特。
- 2、增大/减小音量/輸入選擇（切換的順序依次為“RCA→3.5（AUX）→光纖→藍牙→USB→TV→RCA→…”）。
- 3、光纖輸入。
- 4、USB音頻輸入接口，可用於連接PC或手機、平板電腦等移動設備來播放音樂。為了能正常工作，用戶需根據將要連接的外部設備類型來選擇合適的數據線。當連接Windows系統的PC使用時，只需一條帶有Type-C插頭的數據線即可實現正常連接。如果要連接蘋果電腦或手機、平板電腦等移動設備使用時，用戶則需要使用一條帶有OTG功能的數據線，才能正常連接使用。
溫馨提示：早期的一些充電線由於不能用於數據通訊，是無法連接使用的。
- 5、RCA輸入用於右/左RCA身聲聲插頭，來自CD/DVD/家庭影院播放機。
- 6、輔助音訊輸入用於 iPod、iPhone、iPad、PC、手機等的3.5毫米插孔。
- 7、左揚聲器輸出信號輸出，用於連接左側無源C707PA MKII揚聲器。
- 8、電源開/關。
- 9、超低音線路輸出介面，插入蓮花線音箱會切換至2.1模式，此時左右聲道頻響的低頻部分會被衰减，因此在不連接外部低音炮使用時，不要在此介面插入任何蓮花線。
- 10、接地注意：外接電唱機時，務必要將唱機的地線連接這個接地柱。
- 11、電源輸入。
- 12、EQ調節。
- 13、TV輸入（僅用於連接TV的ARC/eARC介面使用）。

遙控器

- 1、待機鍵按下可進入/退出待機模式。
- 2、上一曲目，播放/暫停，下一曲目。
- 3、超低音輸出增“+”，超低音輸出減“-”。
- 4、短按為復位鍵。
長按（按住保持3秒以上）為藍牙配對鍵。
- 5、LED亮度鍵。
按下可迴圈調節LED指示燈的亮度。
- 6、輸入選擇按鍵。
按下可迴圈切換輸入模式。
- 7、音量按鈕按“-”，音量减小。
按“+”，音量增大。
- 8、環繞聲音效鍵。
按下可迴圈切換環繞聲音效的強弱。

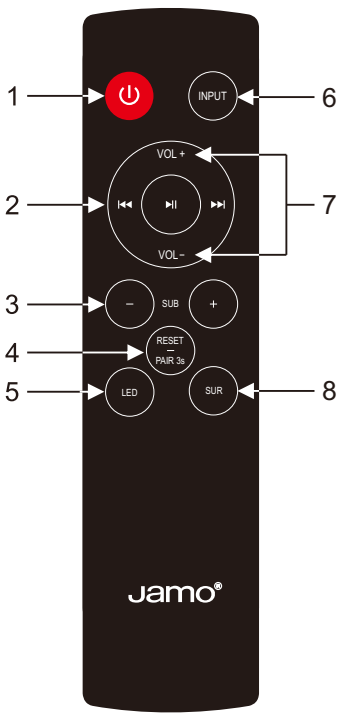

功能說明

1. 光纖數位輸入介面光纖數位輸入介面支持S/PDIF數位音訊輸入，對杜比，DTS等編碼的數位信號無法正常解碼重播，功放輸出可能不正常，因此在使用時請先確認信號源所播放的是否為非上述編碼的音訊檔案。

2. 音量/模式選擇旋鈕後板上的音量/模式選擇旋鈕具有三種功能，向右/向左旋轉為音量加減控制，短按旋鈕（按壓時間< 1秒）為輸入模式切換，切換的順序依次為“RCA→3.5（AUX）→光纖→藍牙→USB→TV→RCA→…”；長按旋鈕（按壓時間>3秒）為藍牙配對功能，關於藍牙配對功能詳見後面相關說明。

3. 電唱機輸入本產品內真MM唱放，雙孔的RCA插座為唱放的輸入介面，它同時也可以作為線路電平輸入介面使用，兩種模式的切換可通過後板上的撥動開關來完成。當開關打在電唱機位置時，產品內部的唱放電路將接入，這時RCA介面只能與無內真唱放的黑膠唱機連接使用，同時需要將電唱機上的接地線連接到後板上的GND接線柱上；如果開關打在線路位置，這時RCA可以連接任何帶線路電平輸出的設備，如內真有唱放的電唱機，CD機，DVD機，磁帶卡座等。

特別提示：本產品在沒有與無內真唱放的黑膠唱機連接使用時，必須將電唱機/線路開關設定在“線路”位置，這是由於唱放輸入的電平信號極高，不使用時將其關閉，儘量避免外界干擾串入產品；同時，外接電唱機時，務必要將電唱機的地線連接GND這個接地柱，還有將“RCA輸入”選擇開關撥到“電唱機”輸入檔比特。

4. 電源/狀態訓示
本產品使用了RGB LED燈訓示功放的狀態：

綠色：為RCA（PHONO）輸入訓示。
黃色：為3.5（AUX）輸入訓示。
紅色：為光纖輸入訓示。
紫色：為TV（ARC/eARC）輸入訓示。
藍色：為藍牙輸入訓示，藍牙未連接，指示燈將緩慢閃爍；藍牙處於配對狀態，指示燈將快速閃爍；藍牙處於連接狀態，指示燈將保持長亮。
白色：為USB輸入訓示。
琥珀色：為待機訓示，訓示產品已進入待機狀態。

藍牙

藍牙配對連接與操作：

Jamo C707PA MKII 音箱支持藍牙音訊輸入功能，可連接手機電腦等藍牙設備播放音樂。

如果您是首次使用Jamo C707PA MKII 音箱的藍牙功能，則首先要讓Jamo C707PA MKII 音箱與你的手機或電腦等藍牙設備進行配對連接，之後才能正常重播輸出您設備上的音訊。

具體操作如下：

1. 打開Jamo C707PA MKII 音箱的電源，等待3秒鐘，同時打開您的藍牙設備的藍牙功能。
2. 長按（約3秒）遙控器上的“ ”鍵或後板上的“VOLUME/SOURCE”旋鈕，讓Jamo C707PA MKII 音箱進入藍牙配對狀態。一旦您這樣做，音箱的指示燈將顯示藍色並快速閃爍，這表示音箱已進入配對狀態。
3. 打開您的手機或藍牙設備上的藍牙功能，然後蒐索藍牙設備，直到名稱“Jamo C707PA MKII”出現在螢幕上。選擇“Jamo C707PA MKII”即可與您的設備連接成功，音箱的指示燈將顯示藍色並停止閃爍。如果您的手機或藍牙設備要求輸入配對碼請輸入“0000”或“1234”。
4. 配對連接成功後，下次開機無需再進行上述操作，您只需打開音箱與您的藍牙設備，二者就可自動回連，如果沒能自動回連，你只需打開您設備的藍牙設備清單，並選擇Jamo C707PA MKII 點擊連接即可。
5. 如果您的藍牙音訊設備支持AVRCP協定，您可以通過遙控器上的“上一曲  /播放/暫停  /下一曲  /”鍵來遙控操作音樂的播放與選曲。

參數規格

頻率回應[±3] dB [Hz]:	50-20KHz
靈敏度[2. 83V/1m] [dB]:	88 dB±2dB
阻抗:	4 Ohms
功放類型:	CLASS-D
輸出功率:	2 x 65W (RMS) @4ohm THD<1%
輸入電壓:	AC100V-120V/60Hz 或220-240V/50Hz
輸入介面:	Bluetooth 5.0 /USB Audio /Jack 3.5/RCA(Line/Phono)/Optical/TV ARC
輸出介面	SUB out RCAx1 (20~160Hz ±3dB)
藍牙:	V5.0 aptX / aptX HD / SBC / AAC
自動待機功能:	長時間（約20分鐘）沒有音樂訊號輸入將自動待機
待機功耗:	<0.5W 符合歐盟ERP指令的標準要求
遙控功能:	支持
分頻器頻率[Hz]:	2500 Hz
高頻喇叭:	1" (25.4mm) DDT減震高音科技波導科技
低頻喇叭:	5.25"(135mm) HCC硬錐盆金屬中心相位塞科技
系統/箱體類型:	倒向箱
連接輸入（s）:	單線
尺寸（WxDxH）:	212x230x295mm
淨重:	11.8 KG



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK