


USER MANUAL

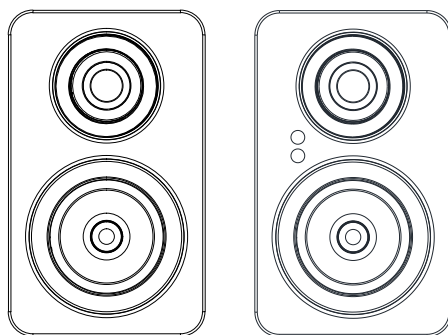

CE

Jamo[®]

C705PA MKII
2.0BT Active

IMPORTANT SAFETY INSTRUCTIONS!







The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.




The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read instructions.
2. Retain these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, used caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
16. An appliance input coupler is used as the disconnect device - the disconnect device shall remain readily operable.

CARE AND CLEANING

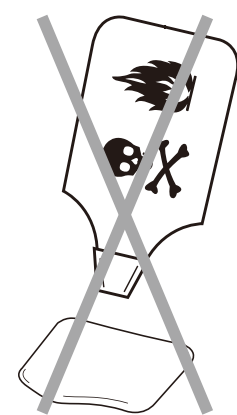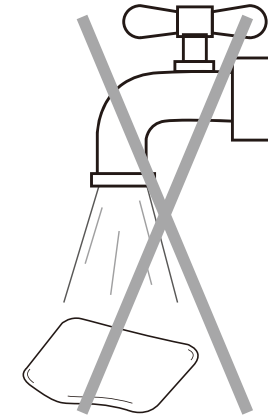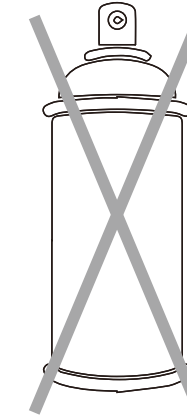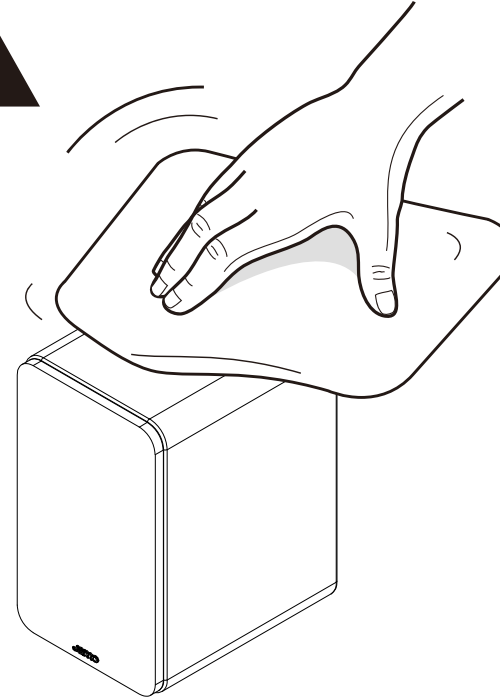








PLACEMENT

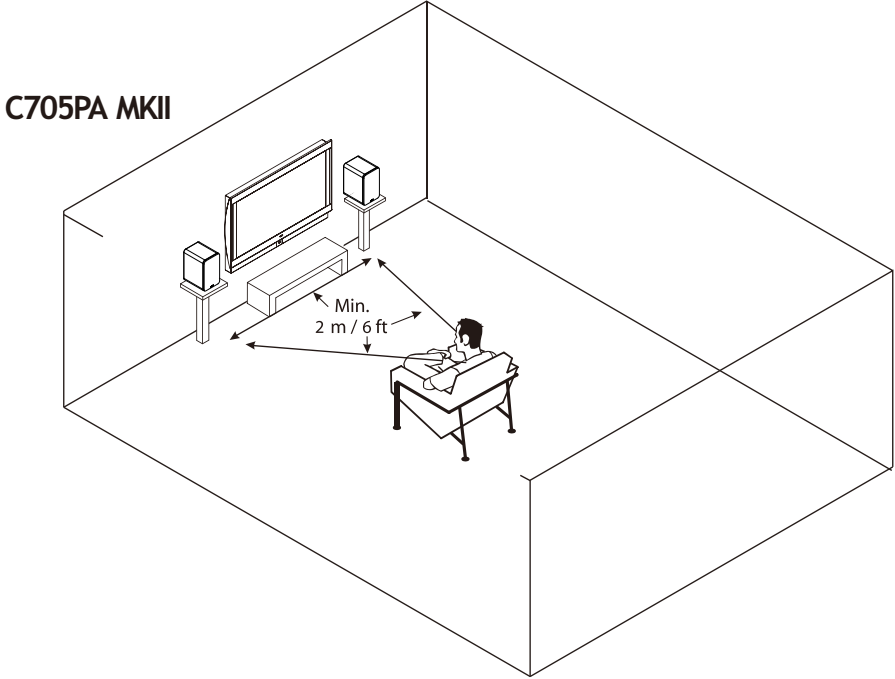

C705PA MKII

3


SETUP

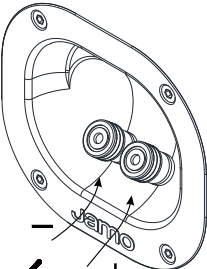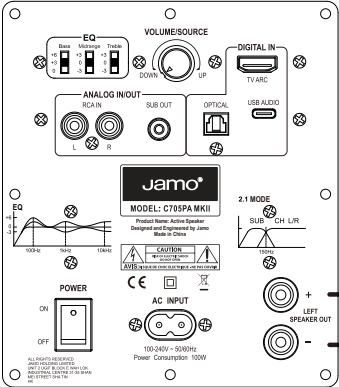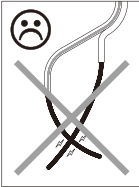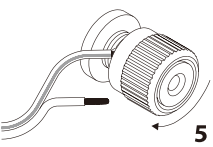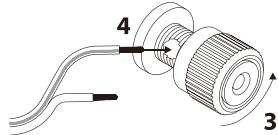

4

FUNCTION DESCRIPTION


Rear Panel of Master Speaker

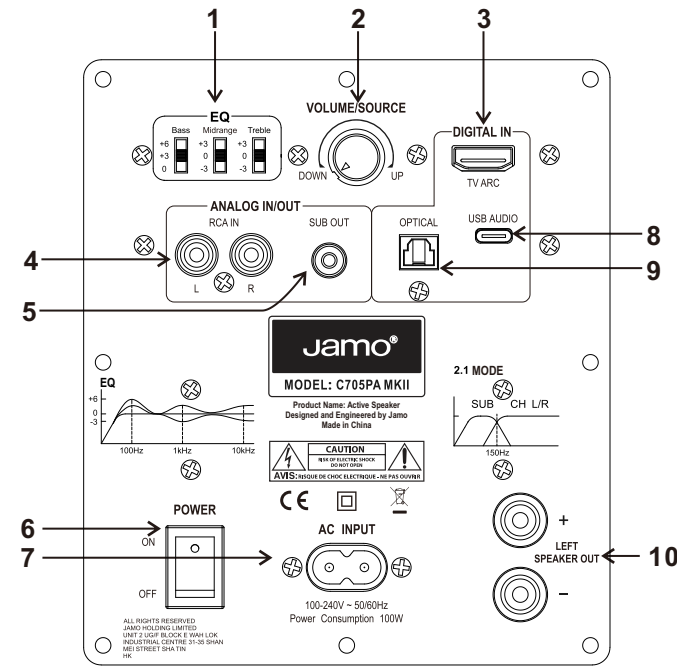

1. EQ regulation.
 2. Volume +/- & input selection (The sequence of inputs by short pressing the VOLUME/SOURCE knob is "RCA→Optica→TV→USB Audio→Blueooth→RCA→...".)
 3. TV input (only used when connecting to ARC/eARC interface of TV)
 4. RCA input, for stereo plug from CD/DVD/home theater player.
 5. Sub output port, when plugging in a RCA cable, the speaker will switch to 2.1 mode, then the low frequency part in left and right channels will be decreased. Hence, do not connect any RCA cable in this port when there is no external subwoofer used.
 6. Power Switch (on/Off)
 7. Power Socket
 8. USB Audio input, to connect with PC/mobile devices such as phones, tablets, etc.
- To play music properly, users need to select the external device to be connected.
- Choose the appropriate data cable based on the type. When using a PC connected to a Windows system, only a data cable with a type-c plug is needed to achieve normal connection. If you want to connect when using Apple computers or mobile devices such as smartphones and tablets, users need to use one.
- Only data cables with OTG function can be connected and used normally.
- Reminder: Some early charging cables could not be connected and used for data communication.
9. Optica input.
 10. Left speaker output signal output, used to connect the left passive C705PA MKII speaker.

Remote Control

1. Press the Standby button to enter/exit from standby mode.
2. Short press: sub out "-"
long press(more than 3 sec): previous play/pause
Short press: sub out "+".
long press(more than 3 sec): next
3. RCA input
4. TV input
5. USB input selection
6. MUTE:
Short press to mute. Press and hold (> 3 seconds) for Bluetooth pairing.
7. Press "Vol-" sound to decrease the weight.
Press "Vol+" to increase the volume.
8. Bluetooth input
9. Optical input

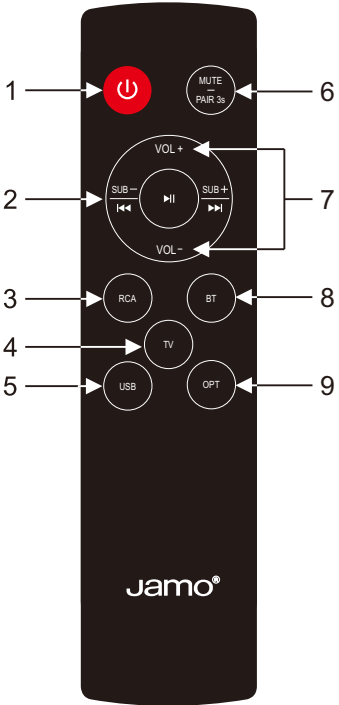

FUNCTIONS

1. Optical Input

The Optical input interface supports S/PDIF digital audio input, but cannot decode or play digital signals encoded by Dolby, DTS, etc. If such signals are connected, it could result in abnormal amplifier output. Therefore, before use, ensure the audio files played by the source device are not encoded with aforementioned formats.

2. VOLUME/SOURCE Knob

The VOLUME/SOURCE knob on back panel contains three functions. By turning the knob to the left/right, you can adjust the volume. By short pressing the knob (< 1 second), you can switch among different input sources, in a sequence of “RCA→Optical→TV→USB→Bluetooth→RCA—...”. Press and hold the knob (> 3 seconds) is for Bluetooth pairing. For details of Bluetooth pairing function, please refer to relevant instructions next.

3. Power Status Indication

RGB LEDs are used to indicate the amplifier status:

Green: RCA.

Red: Optical.

Purple: TV.

Blue: Bluetooth, when bluetooth is not connected, blue LED will flash slowly, when bluetooth is under pairing mode, blue LED will flash quickly, when bluetooth is connected, the blue LED will be solid.

White: USB.

Amber color: The flashing Amber LED indicates that the unit has entered the Mute status. The solid ON Amber LED indicates that the unit has entered the Standby status.

FUNCTIONS

Bluetooth

Bluetooth pairing connection and operation:

The Jamo C705PA MKII speaker supports Bluetooth audio input function and can be connected to Bluetooth devices such as mobile phones and computers to play music.

If you are using the Bluetooth function of the Jamo C705PA MKII speaker for the first time, you need to pair and connect the Jamo C705PA MKII speaker with your Bluetooth device such as your phone or computer before you can play back and output audio from your device normally.

The specific operation is as follows:

1. Turn on the power of Jamo C705PA MKII, and wait for 3 seconds.
2. Press and hold the “” button on remote control (for about 3 seconds), or press and hold the “VOLUME/SOURCE” button on the back panel (for about 3 seconds), so as to have the Jamo C705PA MKII go into Bluetooth pairing mode. Then select the Bluetooth input. Once this has been done, the blue LED will flash rapidly. Otherwise, check if there is any other Bluetooth device already connected to the Jamo C705PA MKII, and shut it down.
3. Select the Bluetooth function in your smartphone/mobile device, and search for new Bluetooth devices until the Bluetooth device name “Jamo C705PA MKII” is found. Click it to pair it with your smartphone/mobile device. In case your device requires a pairing code, you can enter “0000” or “1234”.
4. When the Jamo C705PA MKII is connected to your smartphone/mobile device, the blue LED will be solid ON and stop flashing. Then the pairing is successful.
5. After successful pairing, no manual operation is required for subsequent use. Simply turn on both the speaker and your Bluetooth device, and they will automatically reconnect. If automatic reconnection fails, open your device's Bluetooth settings list, select "Jamo C705PA MKII" and tap to connect.

Bluetooth Operations

1. Press the “” button on remote control to select the Bluetooth input mode on Jamo C705PA MKII. Or, press the “VOLUME/SOURCE” button on back panel to access Bluetooth channel.
2. When your smartphone/mobile device is already paired with Jamo C705PA MKII, open the Bluetooth settings on your device and select “Jamo C705PA MKII” in your Bluetooth device list. Then your Jamo C705PA MKII will automatically connect to your device.
3. If your Bluetooth audio device supports the AVRCP protocol, you can use the "Previous Track  / Play/Pause  / Next Track  " buttons on the remote control to remotely control music playback and track selection.

PARAMETER SPECIFICATIONS

Frequency response [±3] dB [Hz]:	55-20KHz
Sensitivity [2.83V/1m] [dB]:	85 ± 2dB
Impedance:	4 Ohms
Amplifier type:	CLASS-D
Output power:	2 x 45W (RMS) @4ohms THD=10% / 2 x 100W (PEAK) @4ohms THD=10%
Input voltage:	AC100V-120V/60Hz OR 220-240V/50Hz
Input Interface:	Bluetooth 5.0 /USB Audio /RCA/Optical/TV
Output interface:	SUB out RCAx1 (20~200Hz ±3dB)
Bluetooth:	V5.0 aptX / aptX HD / SBC / AAC
Auto Standby Function:	When there is no music signal input for a long while (about 18 minutes), the unit will go to standby automatically.
Standby power:	<0.5W meets the standard requirements of the EU ERP Directive
Remote control function:	Support
Frequency divider frequency [Hz]:	3kHz
High frequency horn:	1" (25.4mm) DDT Shock absorption high-frequency technology, waveguide technology
Low frequency speaker:	4" (105mm) HCC hard cone and metal center phase plug technology
System/enclosure type:	Vented
Connect Input(s):	single line
Size(WxDxH):	160x205x265mm
Net weight:	8 KG(a pair)



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK

使用注意事项





- ⚡ 等边三角形中有箭头闪电标号的图形表示警告使用者在产品内有非绝缘的“危险电压”，可能会对人体造成很大的电击危险。
- ⚠ 等边三角形中有感叹号的图形表示警告使用者该设备在操作与维护（维修）方面应严格按照所附设备说明书。

- 1) 请详细阅读、保留本使用手册，并遵照本手册的说明进行操作。
- 2) 请注意手册上所有的警示及注意事项。
- 3) 请勿将本产品安装于或靠近会发出热源的地方，如：电热器、电热线圈、火炉等；不能在机箱上放置明火源，如：点亮的蜡烛等。
- 4) 长时间不使用本机时须将插头拔离电源插座，从插座拔出插头时应抓住插头将其拔出。
- 5) 为了完全切断本机电源，电源插头应完全中断机器的电源供应，电源插座必须置于使用者容易接近的地方。
- 6) 请不要靠近水源或有水花溅出的地方使用本产品或任何液体或物品渗入或进入本产品。
- 7) 勿打开后板或改装本机。
- 8) 遇到产品故障或任何有关故障维修的事宜，请咨询认可的维修或服务人员。
- 9) 为避免机体的表面刮伤，我们建议您使用干的软质布料清洁本产品，请勿使用含酒精成份或清洁剂来擦拭机箱以避免损害机体表面的漆质。
- 10) 请不要让儿童使用遥控器或将遥控器放置于儿童可以拿到的地方，不当的处置电池可能会引起火灾或化学性腐蚀，请勿将电池直接进行充电、拆解、加热，焚毁或放置于高热（摄氏100度）的地方。


CARE AND CLEANING

保养与清洁

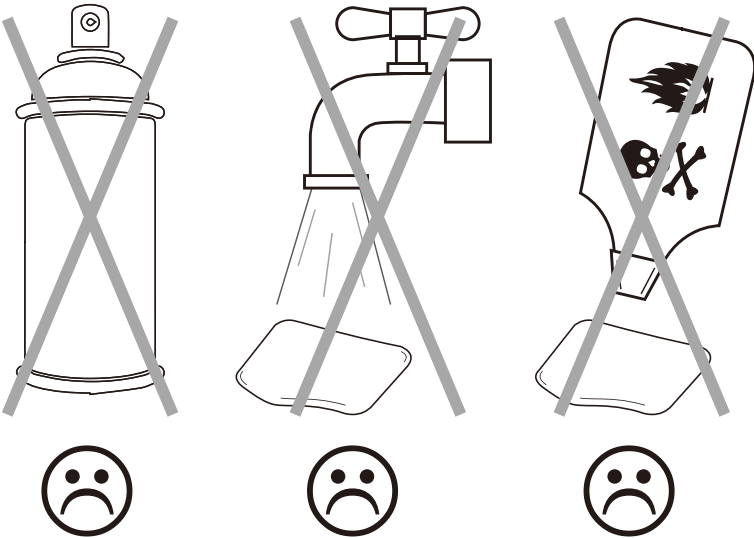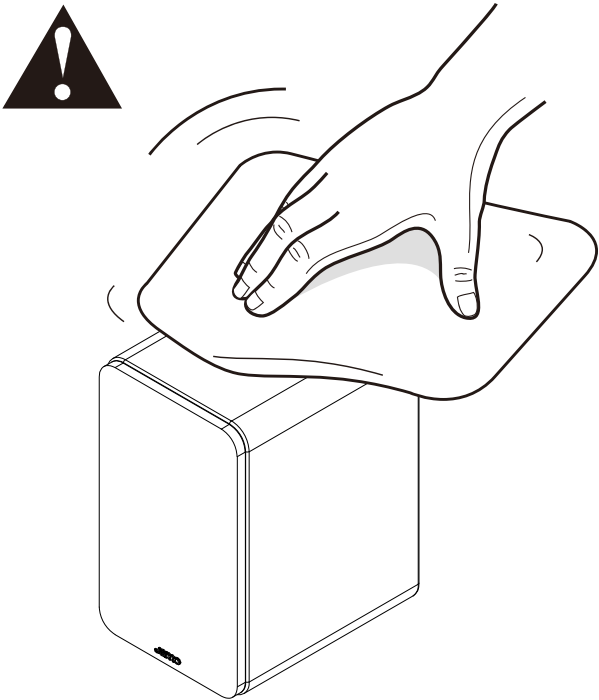

PLACEMENT


布置

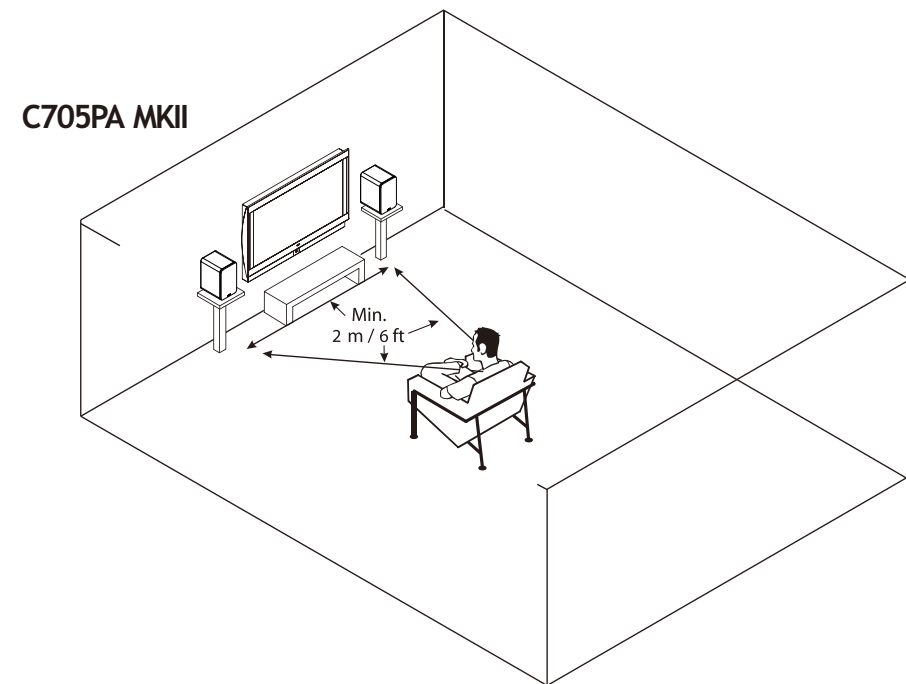

13


SETUP

设置

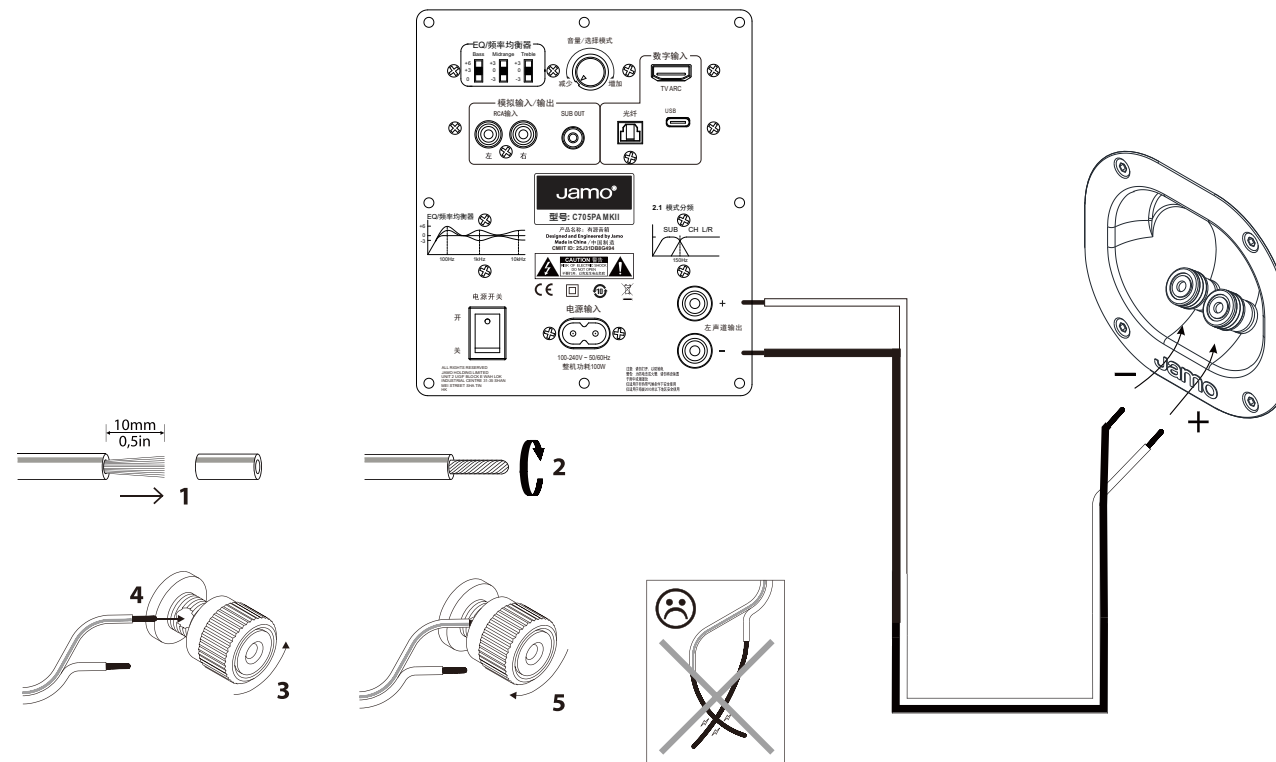

功能说明


主箱功放后板

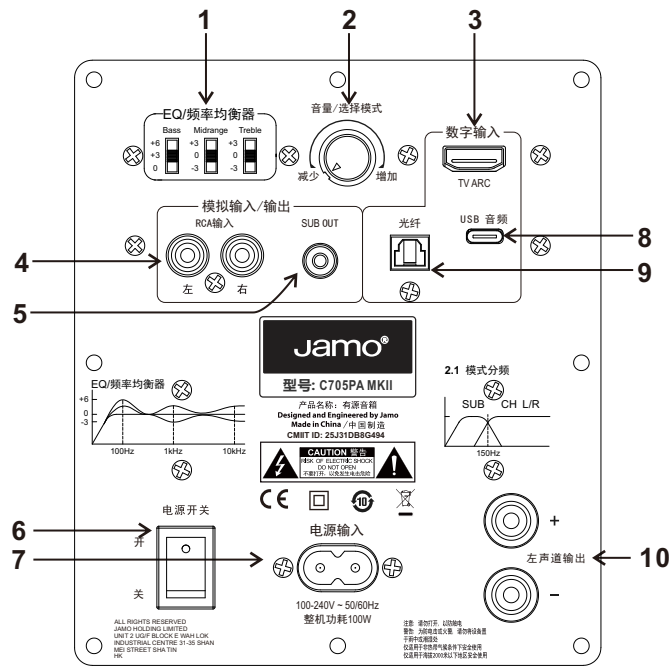

1. EQ 调节。
2. 增大/减小音量/输入选择。
(短按切换的顺序依次为“RCA→光纤→TV→USB→蓝牙→RCA→...”)
3. TV 输入 (仅用于连接TV的ARC/eARC接口使用)。
4. 音频输入用于左/右RCA立体声插头，来自CD/DVD/家庭影院播放器。
5. 超低音线路输出接口，插入莲花线音箱会切换至2.1模式，此时左右声道频响的低频部分会被衰减，因此在不连接外部低音炮使用时，不要在次接口插入任何莲花线。
6. 电源开/关。
7. 电源输入。
8. USB音频输入接口，可用于连接PC或手机、平板电脑等移动设备来播放音乐，为了能正常工作，用户需根据将要连接的外部设备类型来选择合适的数据线。当连接windows系统的PC使用时，只需一条带有type-c插头的数据线即可实现正常连接。如果要连接苹果电脑或手机、平板电脑等移动设备使用时，用户则需要使用一条带有OTG功能的数据线，才能正常连接使用。
温馨提示：早期的一些充电线由于不能用于数据通讯是无法连接使用的。
9. 光纤输入。
10. 左扬声器输出信号输出，用于连接左侧无源C705PA MKII扬声器。

遥控器

1. 待机键按下可进入/退出待机模式
2. 短按为超低音输出“-”
长按是 (保持3秒以上) 为上一曲目播放/暂停
短按为超低音输出“+”
长按是 (保持3秒以上) 为下一曲目
3. RCA输入选择
4. TV输入选择
5. USB输入选择
6. 短按为静音键
长按 (按住保持3秒以上) 为蓝牙配对键
7. 音量按钮按“-”音量减小
按“+”音量增大
8. 蓝牙输入选择
9. 光纤输入选择

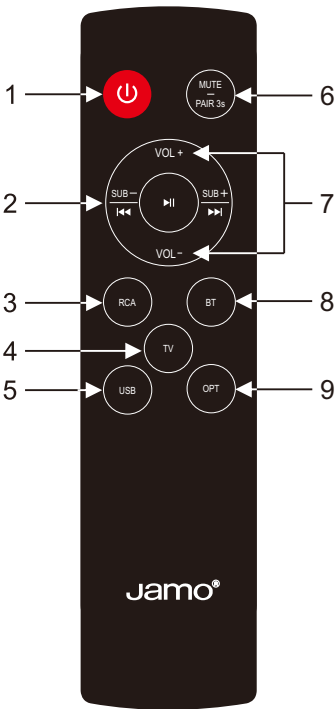

功能说明

1. 光纤数字输入接口

光纤数字输入接口支持S/PDIF数字音频输入，对杜比，DTS等编码的数字信号无法正常解码回放，功放输出可能不正常，因此在使用时请先确认信号源所播放的是否为非上述编码的音频文件。

2. 音量/模式选择旋钮

后板上的音量/模式选择旋钮具有三种功能，向右/向左旋转为音量加减控制，短按旋钮（按压时间<1秒）为输入模式切换，切换的顺序依次为“RCA→光纤→TV→USB→蓝牙→RCA→…”；长按旋钮（按压时间>3秒）为蓝牙配对功能，关于蓝牙配对功能详见后面相关说明。

3. 电源/状态指示

本产品使用了RGB LED灯指示功放的状态：

绿色：为RCA输入指示。

红色：为光纤输入指示。

紫色：为TV输入指示。

蓝色：为蓝牙输入指示，蓝牙未连接，指示灯将缓慢闪烁；蓝牙处于配对状态，指示灯将快速闪烁；蓝牙处于连接状态，指示灯将保持长亮。

白色：为USB输入指示。

琥珀色：指示灯闪烁表示产品进入静音状态；指示灯常亮表示产品已进入待机状态。

蓝牙

通过蓝牙配对连接与操作：

Jamo C705PA MKII音箱支持蓝牙音频输入功能，可连接手机电脑等蓝牙设备播放音乐。

如果您是首次使用Jamo C705PA MKII音箱的蓝牙功能，则首先要让Jamo C705PA MKII音箱与你的手机或电脑等蓝牙设备进行配对连接，之后才能正常回放输出您设备上的音频。

具体操作如下：

1. 打开Jamo C705PA MKII电源，等待3秒钟。
2. 长按（约3秒）遥控器上的“”蓝牙配对键，或长按(约3秒)后板上的“音量/选择模式”，让Jamo C705PA MKII进入蓝牙配对状态来选择蓝牙输入模式。一旦您这样做，蓝色指示灯将快速闪烁。如果没有，请检查是否有其他蓝牙设备连接使用Jamo C705PA MKII并关闭其他蓝牙设备。
3. 选择智能手机/移动设备上的蓝牙功能，然后搜索新功能蓝牙设备，直到名称“Jamo C705PA MKII”出现在屏幕上。选择“Jamo C705PA MKII”可与您的智能手机/移动设备配对。如果你的智能手机/手机设备要求输入配对码请输入“0000”或“1234”。
4. 如果配对成功并且Jamo C705PA MKII已连接到您的智能手机/手机设备，蓝色指示灯将保持亮起并停止闪烁。配对现已完成。
5. 配对连接成功后，下次开机无需再进行上述操作，您只需打开音箱与您的蓝牙设备，二者就可自动回连，如果没能自动回连，你只需打开您设备的蓝牙设备列表，并选择Jamo C705PA MKII点击连接即可。

操作蓝牙功能

1. 按遥控器上的“”键选择Jamo C705PA MKII上的蓝牙输入模式或按后板上的“音量/选择模式”按钮进入蓝牙通道。
2. 如果您已经将智能手机/移动设备与Jamo C707PA MKII配对，请选择打开智能手机/移动设备上的蓝牙设置，然后选择“Jamo C705PA MKII”出现在您的蓝牙设备列表中。您的Jamo C705PA MKII将自动连接到您的智能手机/移动设备。
3. 如果您的蓝牙音频设备支持AVRCP协议，您可以通过遥控器上的“上一曲  /播放/暂停  / 下一曲  ”键来遥控操作音乐的播放与选曲。

参数规格

频率响应 [±3] dB [Hz]:	55-20KHz
灵敏度 [2.83V/1m] [dB]:	85 ± 2dB
阻抗:	4 Ohms
功放类型:	CLASS-D
输出功率:	2 x 45W (RMS) @4ohms THD=10% / 2 x 100W (PEAK) @4ohms THD=10%
输入电压:	AC100V-120V/60Hz 或220-240V/50Hz
输入接口:	Bluetooth 5.0 /USB Audio /RCA/Optical/TV
输出接口	SUB out RCAx1 (20~220Hz ±3dB)
蓝 牙:	V5.0 aptX / aptX HD / SBC / AAC
自动待机功能:	长时间（约18分钟）没有音乐信号输入将自动待机
待机功耗:	<0.5W 符合欧盟ERP指令的标准要求
遥控功能:	支持
分频器频率 [Hz]:	3kHz
高频喇叭:	1" (25.4mm) DDT减震高音技术 波导技术
低频喇叭:	4" (105mm) HCC硬锥盆 金属中心相位塞技术
系统/箱体类型:	倒相箱
连接输入(s):	单线
尺寸(WxDxH):	160x205x265mm
净重:	8 KG （一对）



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK

使用注意事項





- ⚡ 等邊三角形中有箭頭閃電標號的圖形表示警告使用者在產品內有非絕緣的“危險電壓，可能會對人體造成很大的電擊危險。
- ⚠ 等邊三角形中有感嘆號的圖形表示警告使用者該設備在操作與維護（維修）方面應嚴格按照所附設備說明書。

- 1) 請詳細閱讀、保留本使用手冊，並遵照本手冊的說明進行操作。
- 2) 請注意手冊上所有的警示及注意事項。
- 3) 請勿將本產品安裝於或靠近會發出熱源的地方，如：電熱器、電熱線圈、火爐等； 不能在主機殼上放置明火源，如：點亮的蠟燭等。
- 4) 長時間不使用本機時須將插頭拔離電源插座，從插座拔出插頭時應抓住插頭將其拔出。
- 5) 為了完全切斷本機電源，電源插頭應完全中斷機器的電源供應，電源插座必須置於使用者容易接近的地方。
- 6) 請不要靠近水源或有水花濺出的地方使用本產品或任何液體或物品滲入或進入本產品。
- 7) 勿打開後板或改裝本機。
- 8) 遇到產品故障或任何有關故障維修的事宜，請諮詢認可的維修或服務人員。
- 9) 為避免機體的表面刮傷，我們建議您使用幹的軟質布料清潔本產品請勿使用含酒精成份或清潔劑來擦拭主機殼以避免損害機體表面的漆質。
- 10) 請不要讓兒童使用遙控器或將遙控器放置於兒童可以拿到的地方，不當的處置電池可能會引起火災或化學性腐蝕，請勿將電池直接進行充電、折開、加熱或改裝本機。 置於高熱（攝氏100度）的地方。


CARE AND CLEANING

保養與清潔

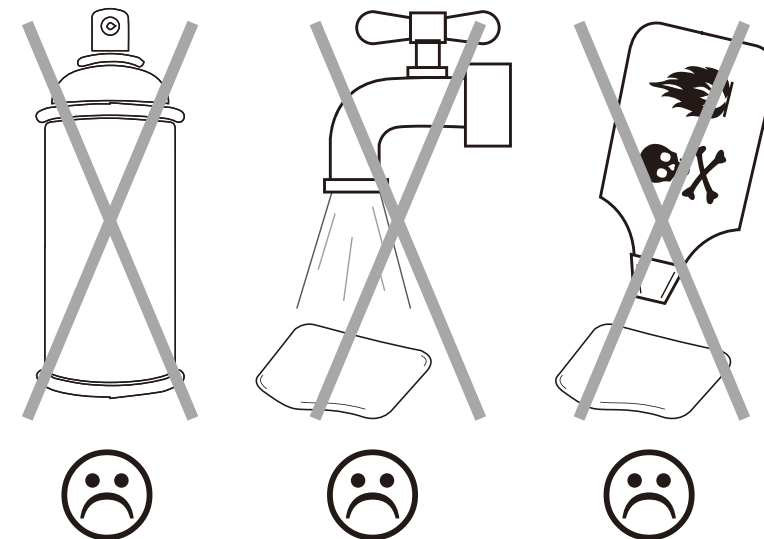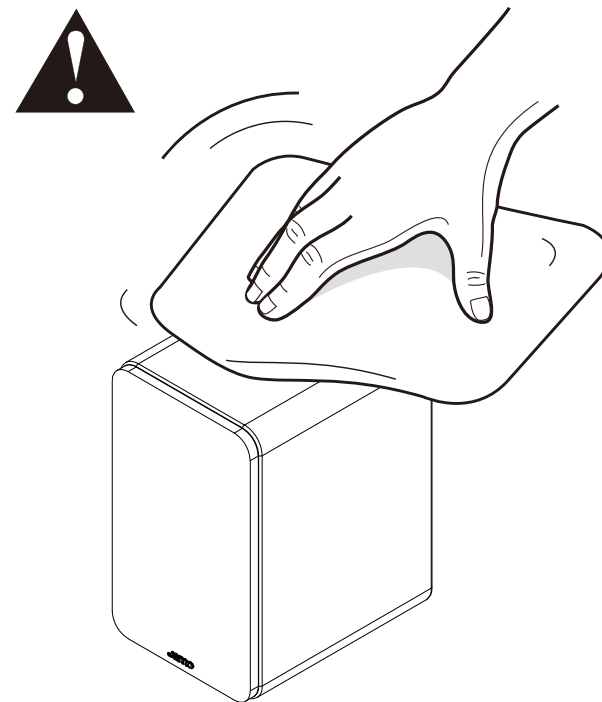

PLACEMENT


佈置

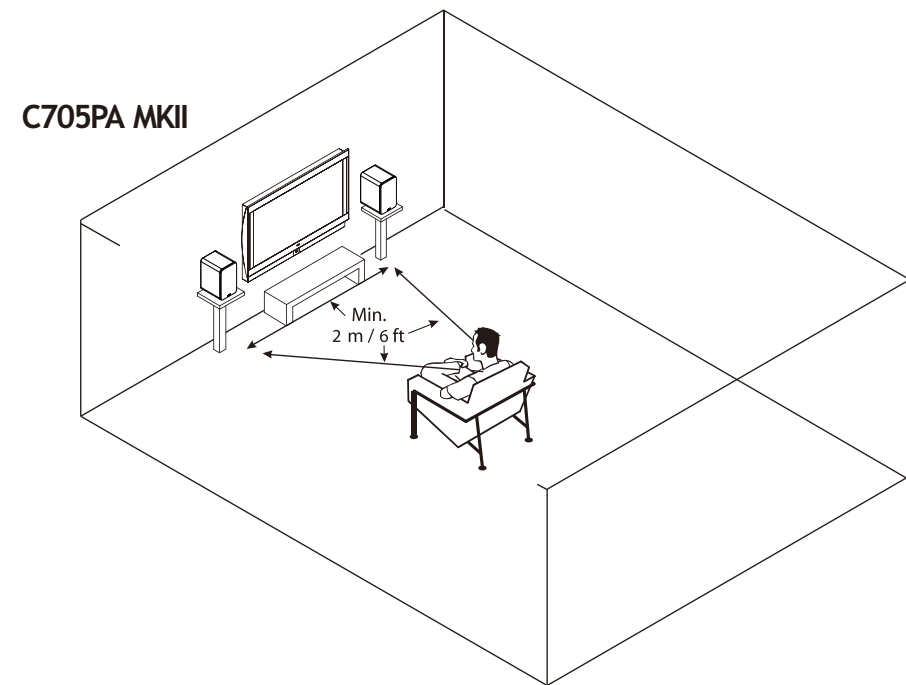

23

SETUP


設定

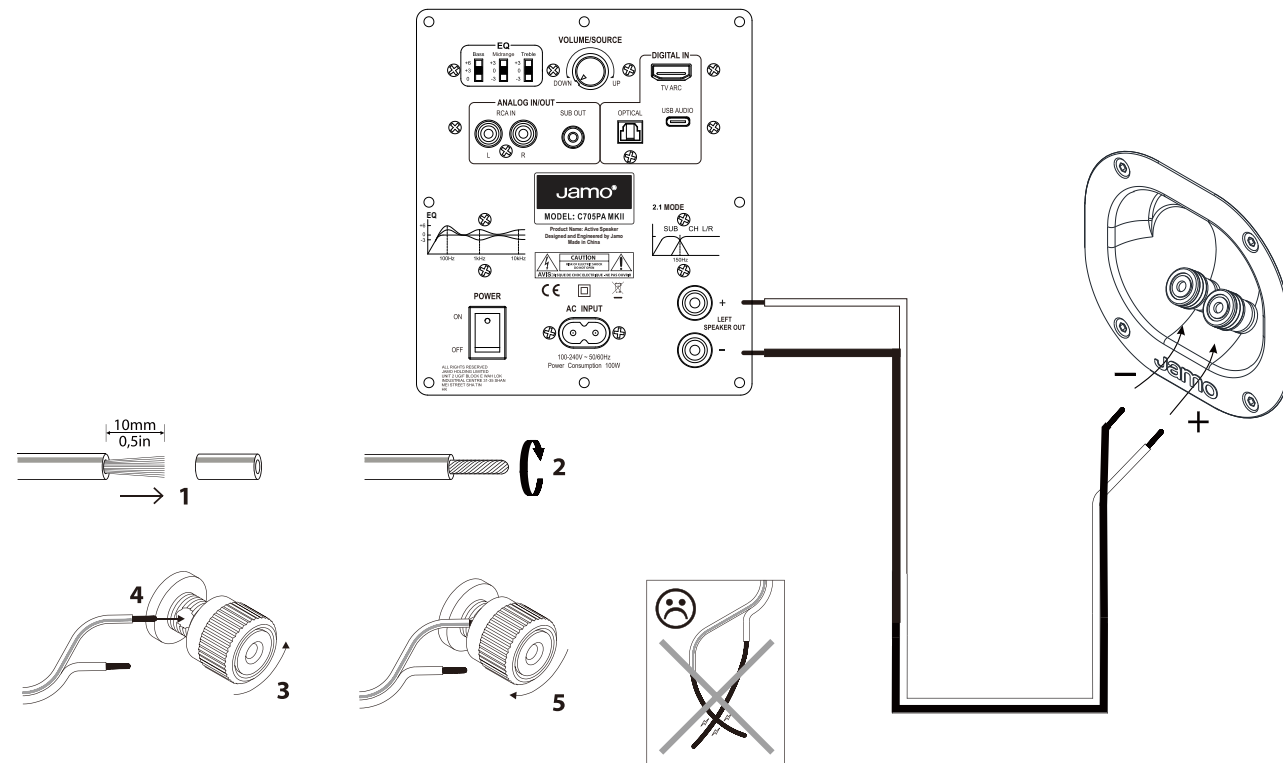

24

功能说明


主箱功放後板

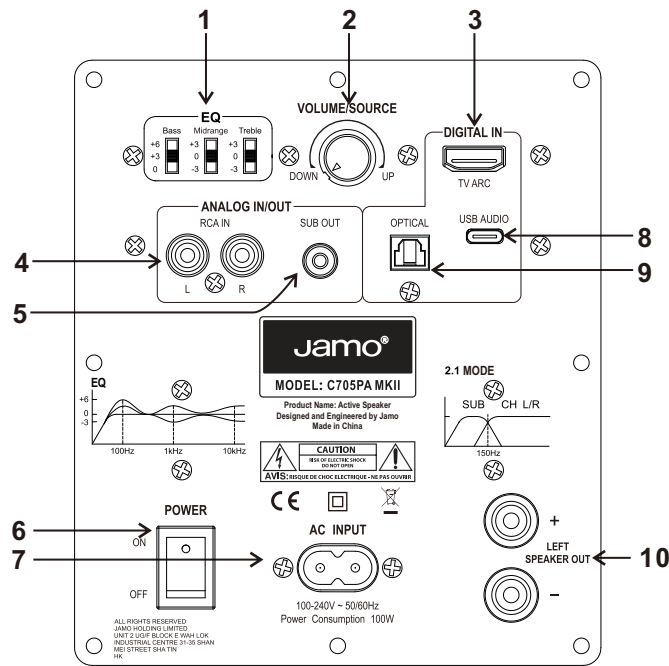

1. EQ調節。
2. 增大/减小音量/輸入選擇 (短按切換的順序依次為 “RCA→光纖→TV→USB→藍牙→RCA→…”)。
3. TV輸入 (僅用於連接TV的ARC/eARC介面使用)。
4. 音訊輸入用於左/右RCA身歷聲插頭，來自CD/DVD/家庭影院播放機。
5. 超低音線路輸出介面，插入蓮花線音箱會切換至2.1模式，此時左右聲道頻響的低頻部分會被衰减，因此在不連接外部低音炮使用時，不要在次介面插入任何蓮花線。
6. 電源開/關。
7. 電源輸入。
8. USB音訊輸入介面，可用於連接PC或手機、平板電腦等移動設備來播放音樂，為了能正常工作，用戶需根據將要連接的外部設備類型來選擇合適的數據線。當連接windows系統的PC使用時，只需一條帶有type-c插頭的數據線即可實現正常連接。如果要連接蘋果電腦或手機、平板電腦等移動設備使用時，用戶則需要使用一條帶有OTG功能的數據線，才能正常連接使用。
溫馨提示：早期的一些充電線由於不能用於數據通訊是無法連接使用的。
9. 光纖輸入。
10. 左揚聲器輸出信號輸出，用於連接左側無源C705PA MKII揚聲器。

遙控器

1. 待機鍵按下可進入/退出待機模式
2. 短按為超低音輸出 “-”
長按是 (保持3秒以上) 為上一曲目
播放/暫停
短按為超低音輸出 “+”
長按是 (保持3秒以上) 為下一曲目
3. RCA輸入選擇
4. TV輸入選擇
5. USB輸入選擇
6. 短按為靜音鍵
長按 (按住保持3秒以上) 為藍牙配對鍵
7. 音量按鈕按 “-” 音量减小
按 “+” 音量增大
8. 藍牙輸入選擇
9. 光纖輸入選擇

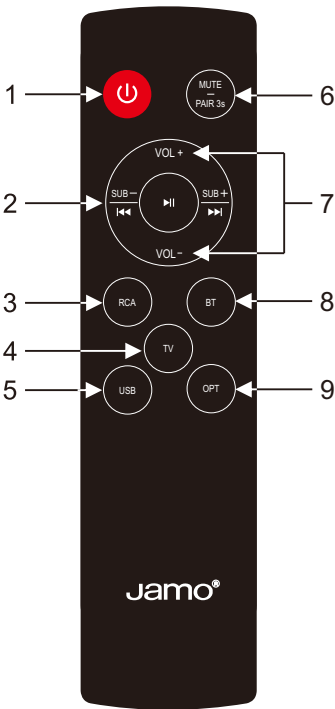

功能說明

1. 光纖數位輸入介面

光纖數位輸入介面支持S/PDIF數位音訊輸入，對杜比，DTS等編碼的數位信號無法正常解碼重播，功放輸出可能不正常，因此在使用時請先確認信號源所播放的是否為非上述編碼的音訊檔案。

2. 音量/模式選擇旋鈕

後板上的音量/模式選擇旋鈕具有三種功能，向右/向左旋轉為音量加減控制，短按旋鈕（按壓時間< 1秒）為輸入模式切換，切換的順序依次為“RCA→光纖→TV→USB→藍牙→RCA→…”；長按旋鈕（按壓時間>3秒）為藍牙配對功能，關於藍牙配對功能詳見後面相關說明。

3. 電源/狀態訓示

本產品使用了RGB LED燈訓示功放的狀態：

綠色：為RCA輸入指示。

紅色：為光纖輸入指示。

紫色：為TV輸入指示。

藍色：為藍牙輸入指示，藍牙未連接，指示燈將緩慢閃爍；藍牙處於配對狀態，指示燈將快速閃爍；藍牙處於連接狀態，指示燈將保持長亮；

白色：為USB輸入指示。

琥珀色：指示燈閃爍表示產品進入靜音狀態；指示燈常亮表示產品已進入待機狀態。

功能說明

藍牙

通過藍牙配對連接與操作：

Jamo C705PA MKII音箱支持藍牙音訊輸入功能，可連接手機電腦等藍牙設備播放音樂。如果您是首次使用Jamo C705PA MKII音箱的藍牙功能，則首先要讓Jamo C705PA MKII音箱與你的手機或電腦等藍牙設備進行配對連接，之後才能正常重播輸出您設備上的音訊。

具體操作如下：

1. 打開Jamo C705PA MKII電源，等待3秒鐘。

2. 長按（約3秒）遙控器上的“”藍牙配對鍵，或長按（約3秒）後板上的“音量/選擇模式”，讓Jamo C705PA MKII進入藍牙配對狀態來選擇藍牙輸入模式。一旦您這樣做，藍色指示燈將快速閃爍。如果沒有，請檢查是否有其他藍牙設備連接使用Jamo C705PA MKII並關閉其他藍牙設備。

3. 選擇智能手機/移動設備上的藍牙功能，然後蒐索新功能藍牙設備，直到名稱“Jamo C705PA MKII”出現在螢幕上。選擇“Jamo C705PA MKII”可與您的智能手機/移動設備配對。如果你的智能手機/手機設備要求輸入配對碼請輸入“0000”或“1234”。

4. 如果配對成功並且Jamo C705PA MKII已連接到您的智能手機/手機設備，藍色指示燈將保持亮起並停止閃爍。配對現已完成。

5. 配對連接成功後，下次開機無需再進行上述操作，您只需打開音箱與您的藍牙設備，二者就可自動回連，如果沒能自動回連，你只需打開您設備的藍牙設備清單，並選擇Jamo C705PA MKII點擊連接即可。

操作藍牙功能

1. 按遙控器上的“”鍵選擇Jamo C705PA MKII上的藍牙輸入模式或按後板上的“音量/選擇模式”按鈕進入藍牙通道。

2. 如果您已經將智能手機/移動設備與Jamo C707PA MKII配對，請選擇打開智能手機/移動設備上的藍牙設定，然後選擇“Jamo C705PA MKII”出現在您的藍牙設備清單中。您的Jamo C705PA MKII將自動連接到您的智能手機/移動設備。

3. 如果您的藍牙音訊設備支持AVRCP協定，您可以通過遙控器上的“上一曲  /播放/暫停  /下一曲  ”鍵來遙控操作音樂的播放與選曲。

參數規格

頻率回應[±3] dB [Hz]:	55-20KHz
靈敏度[2. 83V/1m] [dB]:	85 ± 2dB
阻抗:	4 Ohms
功放類型:	CLASS-D
輸出功率:	2 x 45W (RMS) @4ohms THD=10% / 2 x 100W (PEAK) @4ohms THD=10%
輸入電壓:	AC100V-120V/60Hz 或220-240V/50Hz
輸入介面:	Bluetooth 5.0 /USB Audio /RCA/Optical/TV
輸出介面:	SUB out RCAx1 (20~220Hz ±3dB)
藍牙:	V5.0 aptX / aptX HD / SBC / AAC
自動待機功能:	長時間（約18分鐘）沒有音樂訊號輸入將自動待機
待機功耗:	<0.5W 符合歐盟ERP指令的標準要求
遙控功能:	支持
分頻點[Hz]:	3kHz
高頻喇叭:	1" (25.4mm) DDT減震高音科技波導科技
低頻喇叭:	4" (105mm) HCC硬錐盆金屬中心相位塞科技
系統/箱體類型:	倒相箱
連接輸入(S):	單線
尺寸(WxDxH):	160x205x265mm
淨重:	8 KG（一對）



jamo.com

ALL RIGHTS RESERVED
JAMO HOLDING LIMITED
UNIT 2 UG/F BLOCK E WAH LOK
INDUSTRIAL CENTRE 31-35 SHAN
MEI STREET SHA TIN
HK