



EAT

European Audio Team

INSTRUCTIONS FOR USE

E.A.T. C-Dur

Dear Music Lover,

Welcome!

Congratulations on your purchase of our E.A.T. C-Dur turntable. Your E.A.T. C-Dur was handcrafted by our skilled technicians here at the European Audio Team. It has been rigorously tested and is ready and waiting for your enjoyment.

Please take the time to read this manual carefully to ensure that you obtain the ultimate performance from your E.A.T. C-Dur. The tips contained within will ensure that your C-Dur's condition will remain like new for many years to come!

Please contact your dealer, should you require further assistance in setting up and maintaining your new turntable.

Important:

Your turntable was shipped partially disassembled in order to avoid damage to sensitive parts. Please check immediately to make sure that neither the packaging nor the device was damaged in transit.

If damaged, please do not operate and contact your dealer.

Please do your part to help protect the environment:

Disposal of packaging material

E.A.T. packaging is carefully designed to protect your component from damage in transit and you are strongly urged to keep the original packaging in order to safely ship or otherwise transport your turntable in the future.

However, the packaging materials were chosen to be environmentally friendly, so if you must discard the packaging, please recycle.

Disposal of old equipment

If you're disposing of old electronic equipment, please use a local waste facility designated for that purpose.





Throughout the manual, this symbol will alert you to potential hazards for the user or the unit, and how to avoid possible misuse.


Contents

Product illustrations and key	4-5
-------------------------------	-----

Setup

1. Sub-platter and drive belt installation	6
2. Platter installation	7
3. Tonearm assembly	8
a) Cartridge assembly	9
b) Counterweight assembly	9
c) Vertical Tracking Force setting (VTF)	10
d) Tonearm output connection	11
e) Vertical Tracking Angle setting (VTA)	11
f) Azimuth setting	12-13
g) Anti-skating assembly and adjustment	13-15
4. Leveling the turntable	16
5. Starting the motor, changing the speed	16
Accessory list, dimensions	17
Technical specifications	18-19
Troubleshooting, warranty, service	20
Packaging overview	21

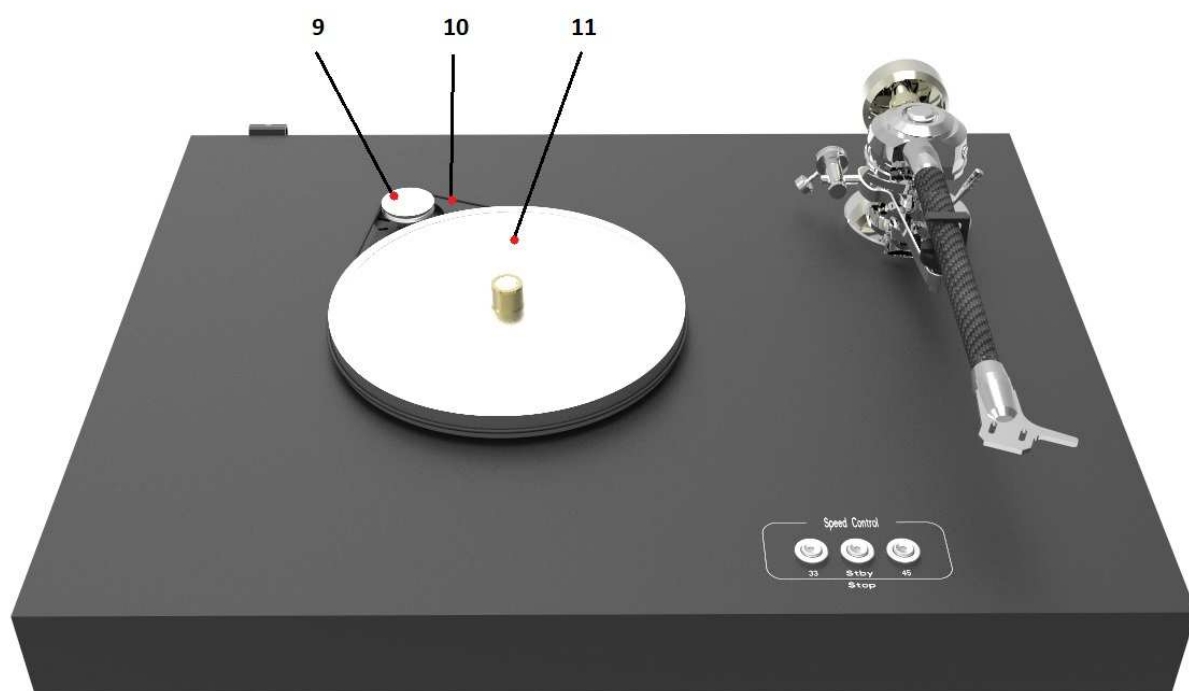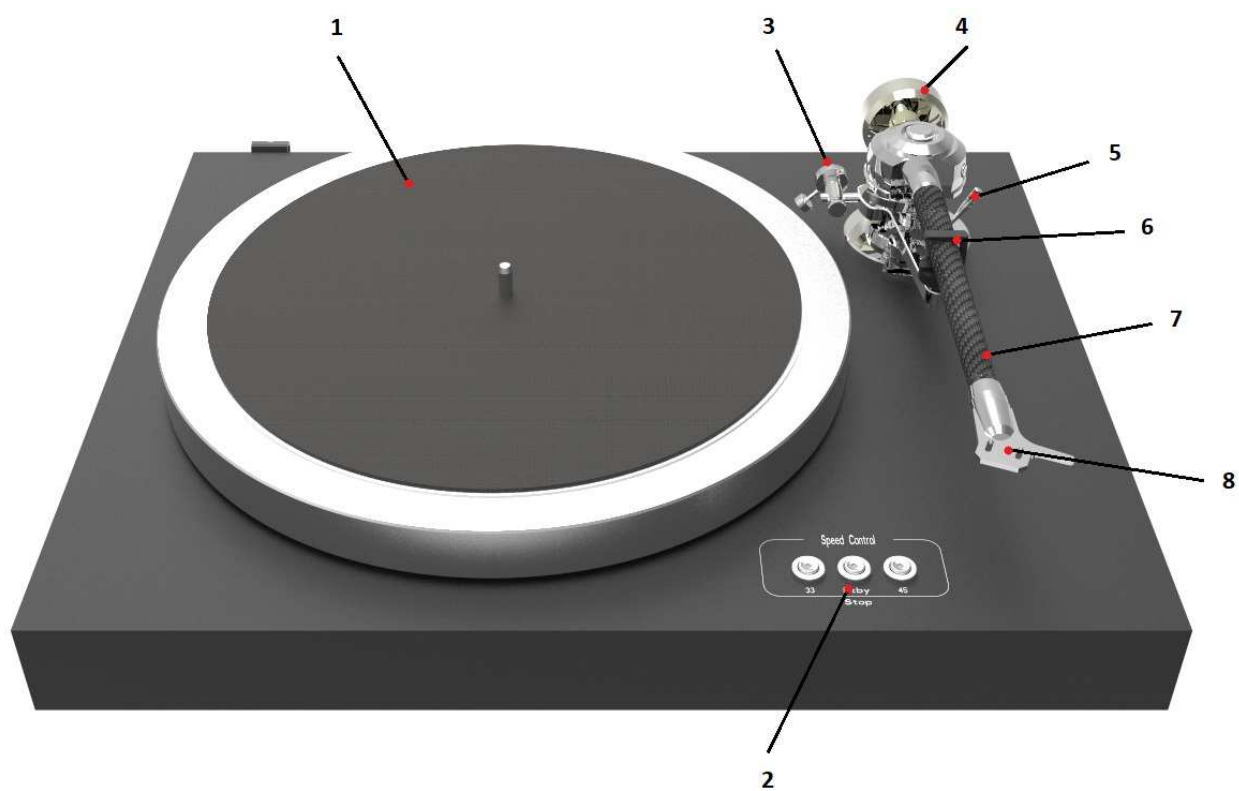

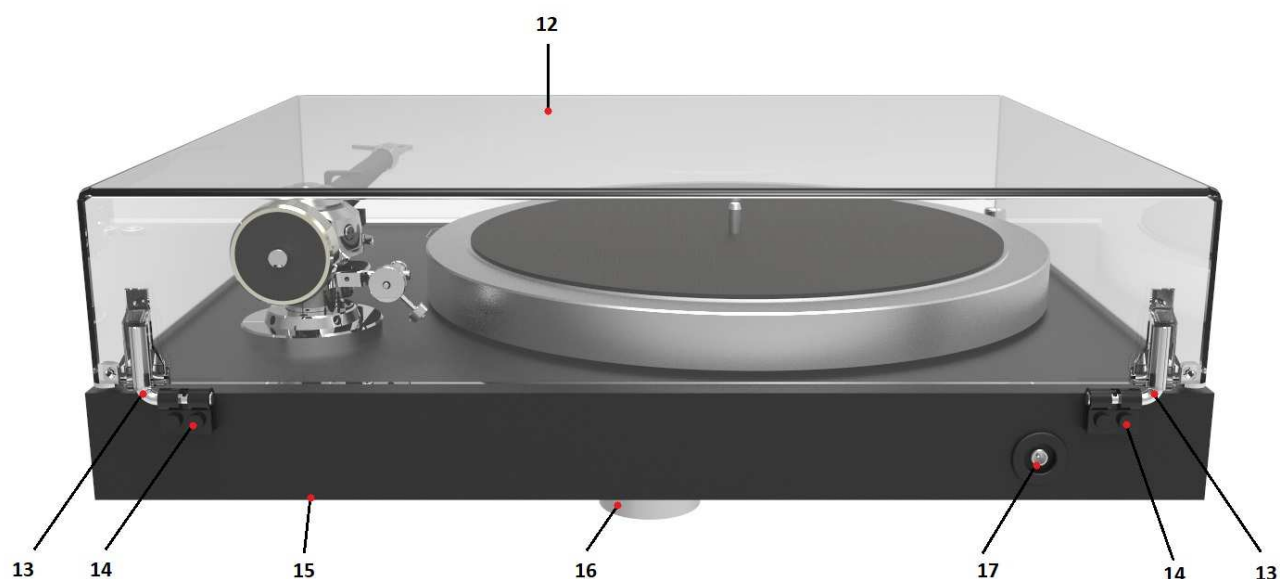

KEY: CONTROLS, FEATURES AND CONNECTIONS


1. Main aluminium platter with felt mat
2. Speed control buttons
3. Anti-skating mechanism
4. Tonearm counterweight
5. Tonearm lift lever
6. Tonearm rest
7. Tonearm tube
8. Headshell with finger lift
9. Motor with motor pulley
10. Drive belt
11. Aluminium sub-platter
12. Lid
13. Lid hinge
14. Hinge fasteners
15. Tonearm output connector (5 PIN)
16. Damped adjustable feet
17. Power supply connector

SETUP

1. Sub-platter and drive belt installation

The **main bearing shaft** and housing in the **sub-platter (11)** are protected by special plastic covers. These covers shield against dust and dirt and keep the bearing shaft and housing sufficiently lubricated. If necessary, lubricate the shaft with grease from the enclosed accessories. Maximum amount is **0.5 ml**. Use the scale on the supplied syringe to measure the desired quantity and distribute the lubricant evenly.

Remove the protective covers from the main **bearing shaft** and from the **sub-platter (11)**. Install the sub-platter and the **drive belt (10)** as shown in the following illustrations.

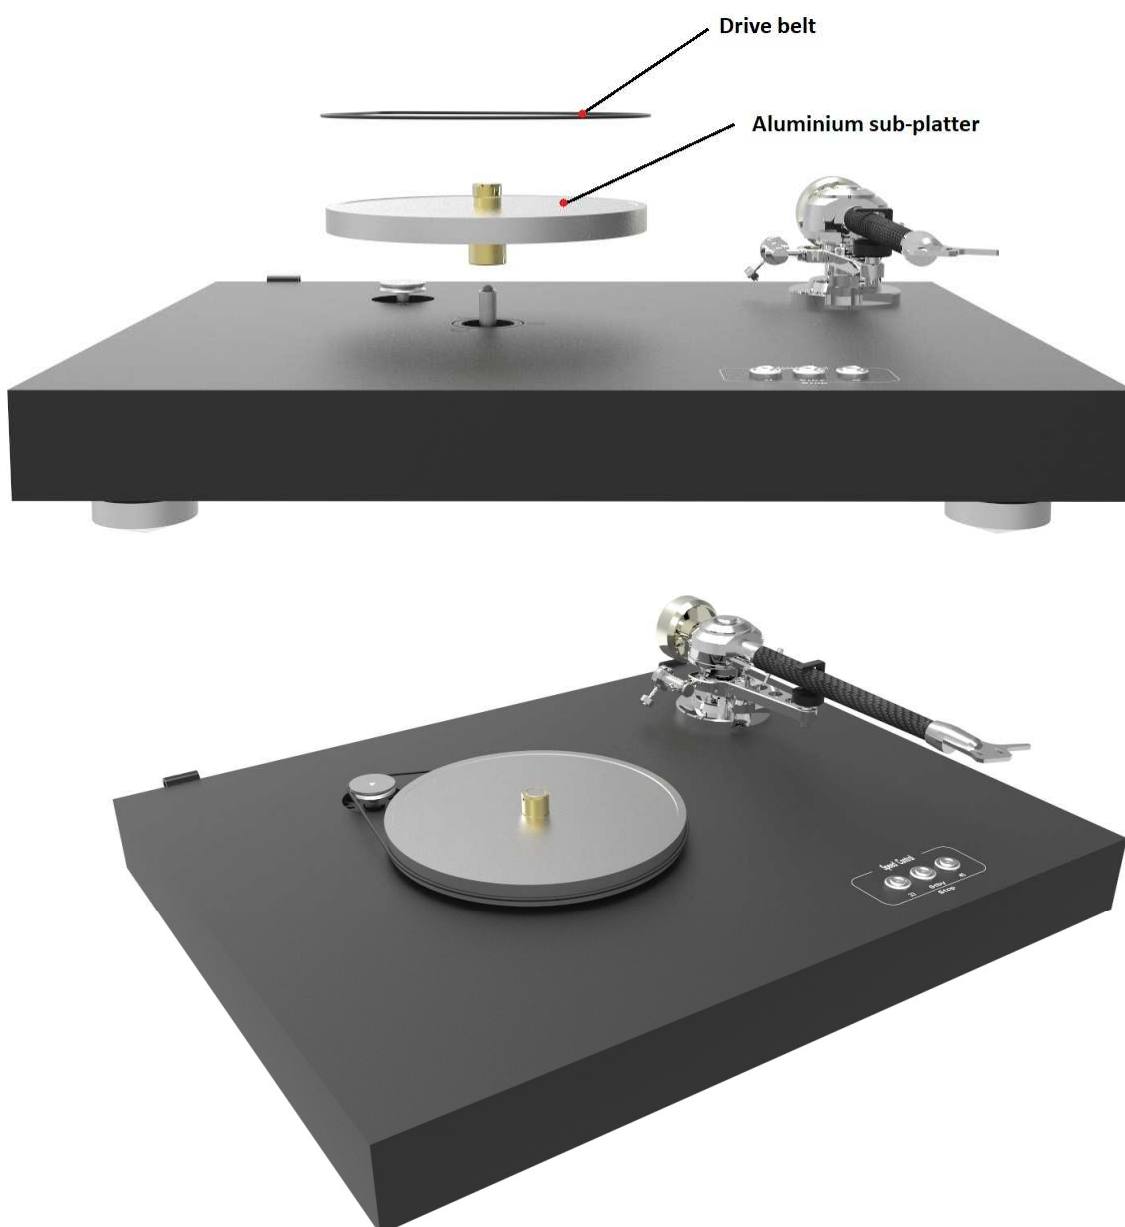


2. Platter installation

Carefully remove the platter from the packaging and install it on the sub-platter as shown in the following illustration.





DO NOT PUT GREASE OR LUBRICANT BETWEEN SUB-PLATTER AND MAIN PLATTER

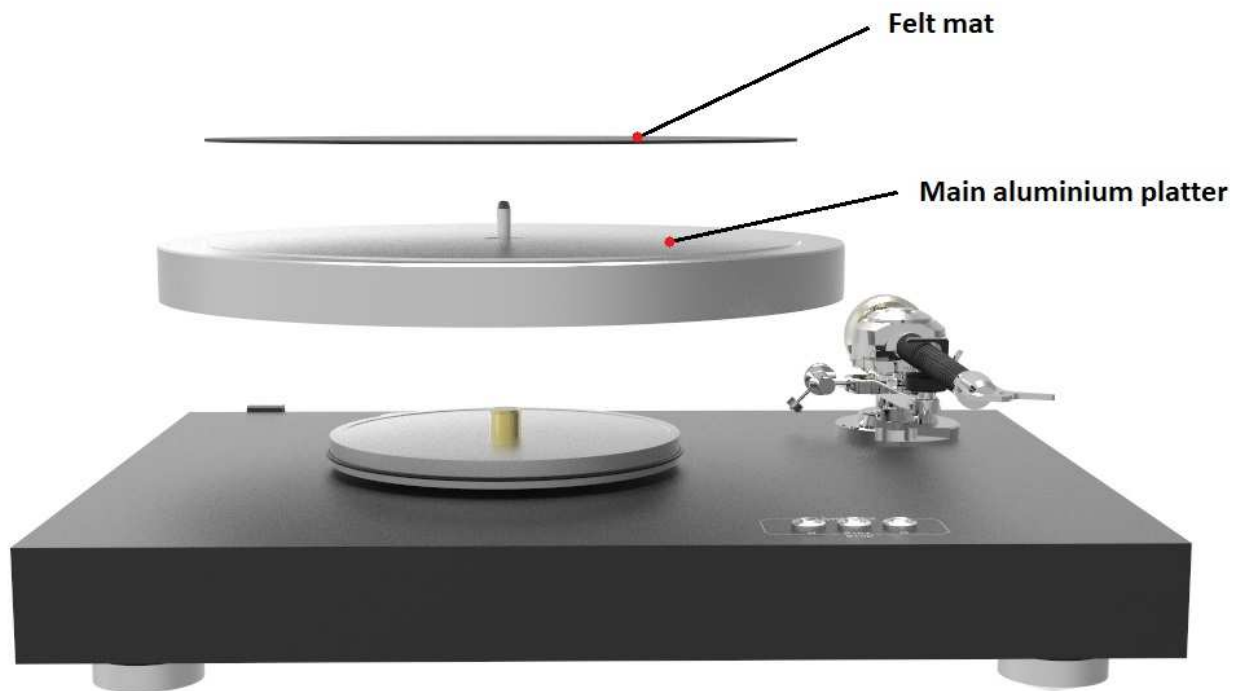

3. Tonearm assembly

The tonearm includes a combination of cardan and uni pivot bearings, immersed in special damping fluid.

See the next steps to set up your tonearm.

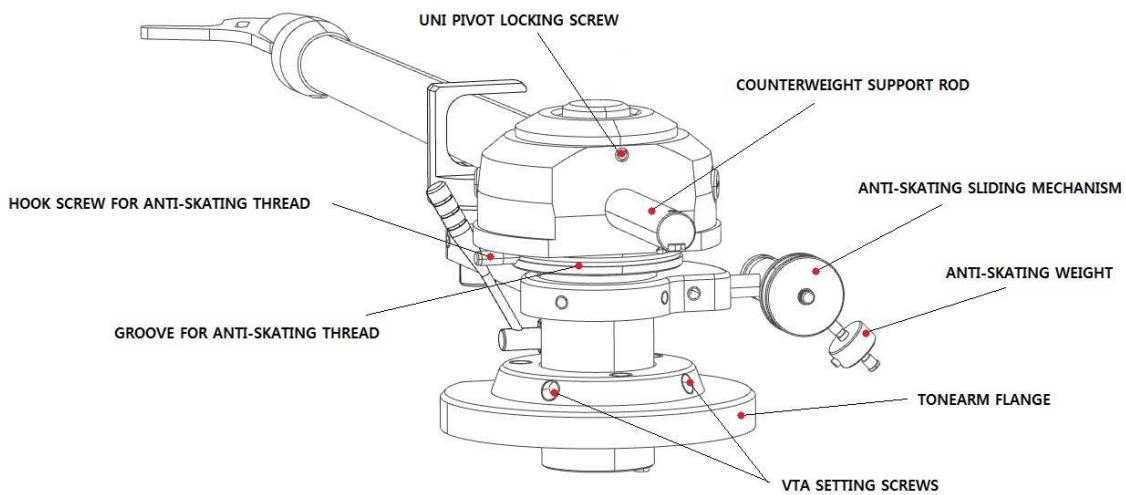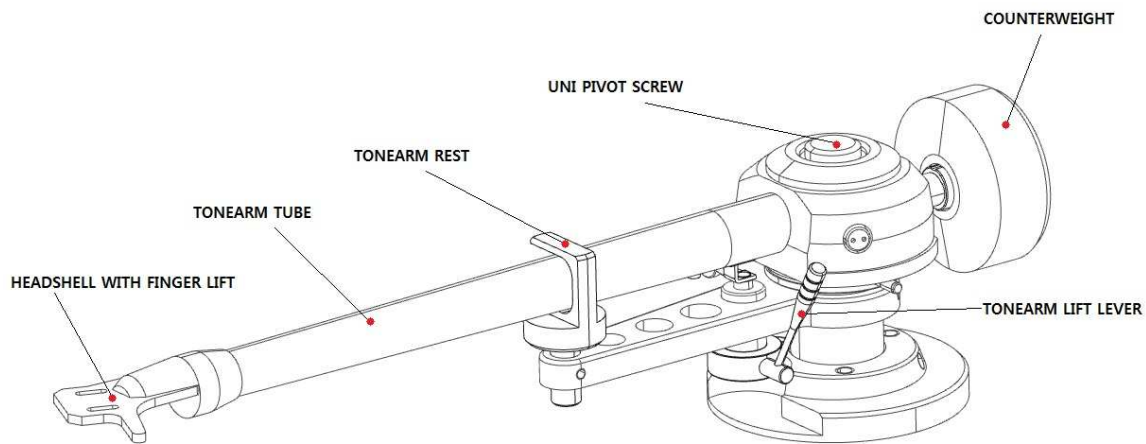

a) Cartridge installation

Install the cartridge into the aluminium headshell, using the appropriate hardware included with your cartridge.

Connect the cartridge as indicated below:

- White left channel L+
- Red right channel R+
- Green right channel R-
- Blue left channel L-

For correct cartridge alignment, use the two-point cartridge alignment protractor provided with your C-Dur accessories. If unfamiliar with two-point setup, please refer to your dealer.


b) Counterweight assembly

The counterweight has two separate parts:

The first part is the counterweight itself. The second part is an additional insert that enables optimal balancing of heavier cartridges.

The counterweight without the additional insert can balance cartridges **from 5 to 9 g.**
(The weight of the counterweight itself is **125 g.**)

The counterweight with the additional insert can balance cartridges **from 8.5 to 13 g.**
(The weight of the counterweight with the additional insert is **142 g.**)

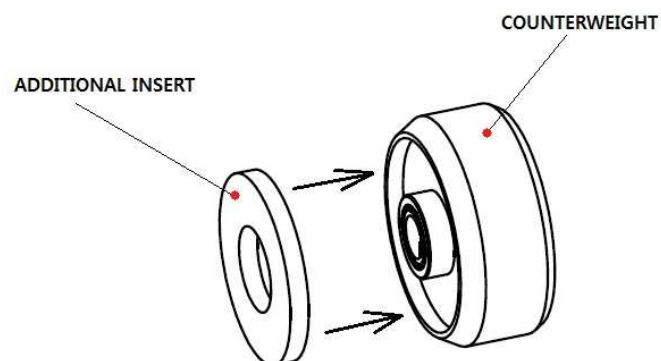


c) Vertical Tracking Force setting (VTF)

Before setting the Vertical Tracking Force, confirm the exact weight of your cartridge. Depending on your cartridge weight, determine whether to use the counterweight with or without the additional insert, in accordance with the specifications above.


Pushing carefully, turn the counterweight onto the rear end of the counterweight support rod as shown in the illustration below. Place the stylus pressure gauge (not supplied) onto the platter. To set the required VTF, lower the tonearm lift lever as indicated in the illustration and place the tip of the stylus on the pressure gauge.

As viewed from the headshell, turning the counterweight counterclockwise (moving it in closer toward the tonearm) increases the VTF, turning clockwise (away from the tonearm) reduces the VTF. Turn the counterweight appropriately until the VTF shown on the pressure gauge matches your cartridge's recommended vertical tracking force specifications.

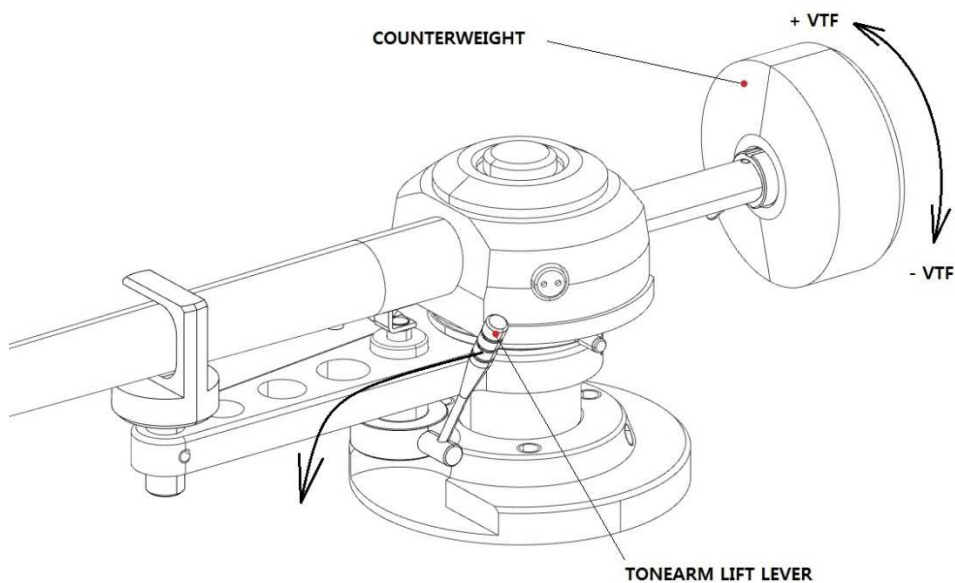

d) Tonearm output connection


Connect the tonearm cable provided with the accessories to the 5-pin tonearm connector that is located at the rear of the turntable, behind the tonearm. To avoid damaging your equipment, make sure to align the connector pins in the proper position!

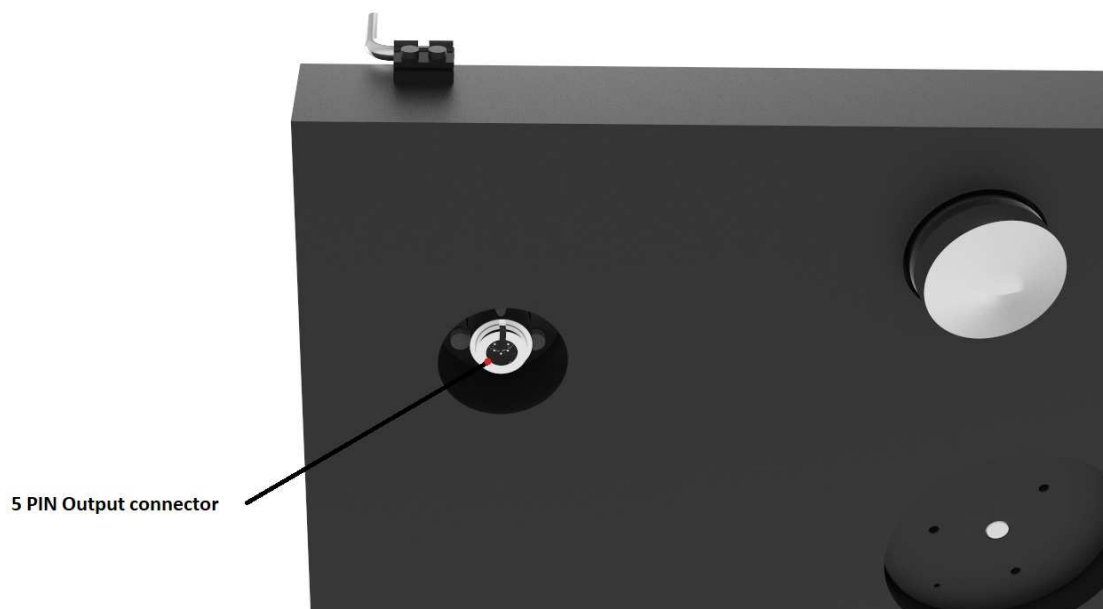

e) Vertical Tracking Angle setting (VTA)

To set the Vertical Tracking Angle, first put a record on the platter. When the needle is lowered into the record groove, the tube of the tonearm should be parallel to the surface of the record. If it is not, loosen both hexagonal screws in the tonearm base just enough to allow vertical movement of the arm pillar without force, and slide the arm up or down until it is parallel.

Carefully and evenly retighten the hexagon screws *without applying excessive force* (which could deform the arm pillar).

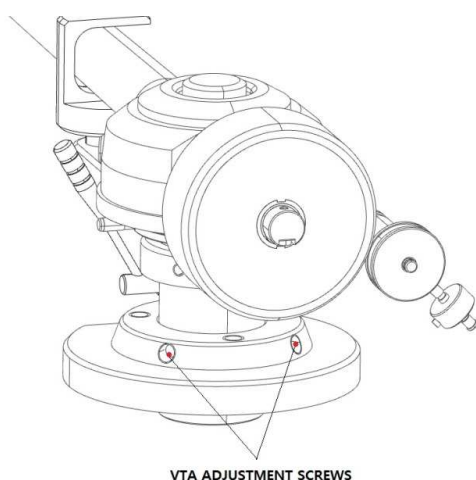

f) Azimuth setting

The cartridge needle must be perpendicular to the record in order to trace the groove wall modulations correctly.

The azimuth (angle) is precisely set by the factory. In the event that you need to modify this setting, however, follow the instructions below.

Step 1:

Unscrew the small UNI PIVOT LOCKING SCREW using the 1.5 mm hexagonal key provided in the accessories. Then carefully lift the UNI PIVOT cover, setting it and the UNI PIVOT LOCKING SCREW aside in a safe and clean place.


Step 2:

Loosen the small AZIMUTH SET SCREW, again using the 1.5 mm hexagonal key.




DO NOT REMOVE THE AZIMUTH SET SCREW COMPLETELY!

Loosen the screw just enough to be able to gently rotate the arm tube and set the azimuth to the correct position. The correct position can be checked from the front view, preferably with the needle placed on a mirror placed on the platter. Once the azimuth setting is correct, gently re-tighten the AZIMUTH SETTING SCREW and replace the UNI PIVOT COVER and the UNI PIVOT LOCKING SCREW.

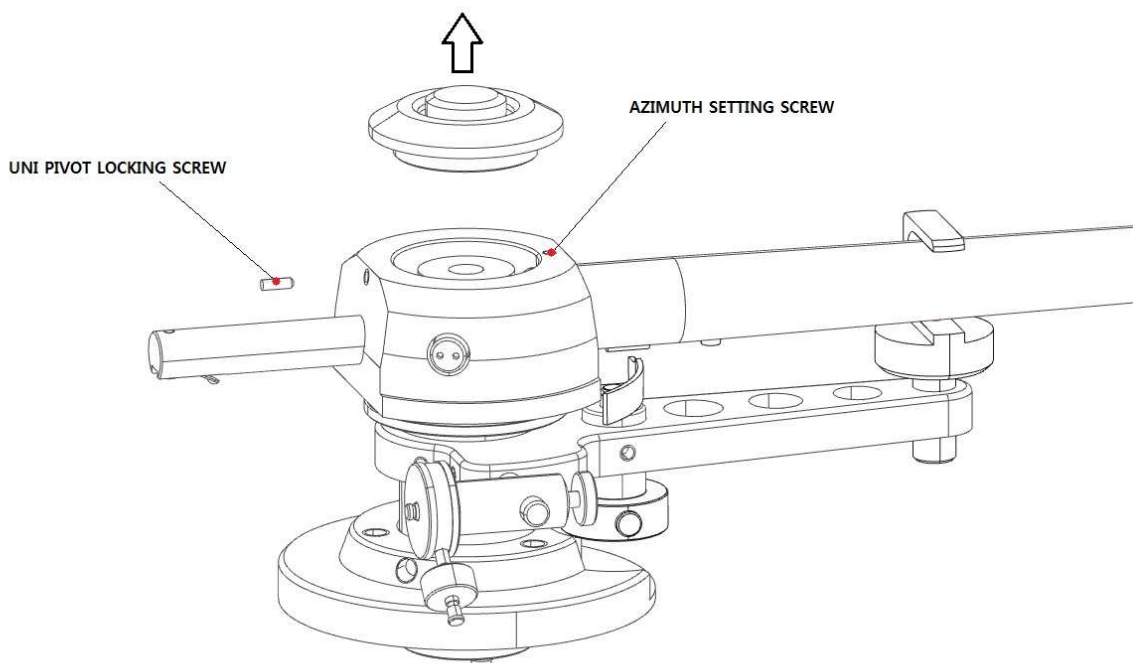


Examples of incorrect azimuth setup:


Too much left angle:

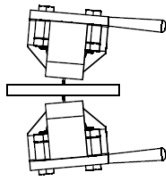

Too much right angle:

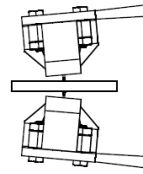

The correct position is 100% perpendicular to the record.

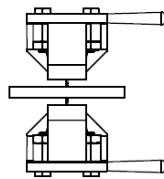


g) Anti-skating assembly and adjustment

The anti-skating mechanism is shipped partially disassembled to avoid damage during transport. For correct installation, please follow the steps below.

Step 1:


Prepare all parts supplied from the accessories bag:

- Anti-skating sliding mechanism with anti-skating weight and thread for mounting on the tonearm
- Anti-skating support rod

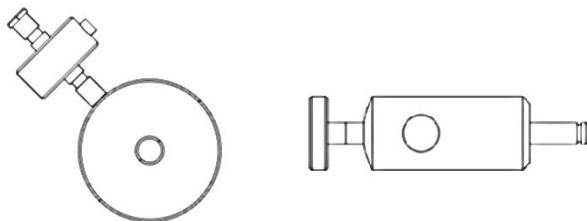


Step 2:

Put the anti-skating support rod on the shaft mounted on the side of the tonearm so that it is parallel to the sub-chassis, as pictured in the illustration below. Then tighten the screw to prevent movement on the shaft.

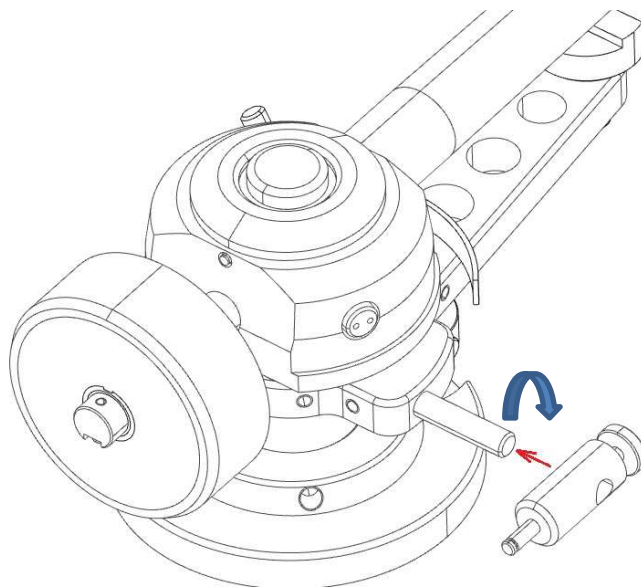

Step 3:

The anti-skating sliding mechanism is supplied with a pre-mounted anti-skating weight and anti-skating thread. Put the eye of the anti-skating thread around the hole for the HOOK SCREW and screw the HOOK SCREW into the tonearm through the eye of the anti-skating thread as shown in the illustration below.

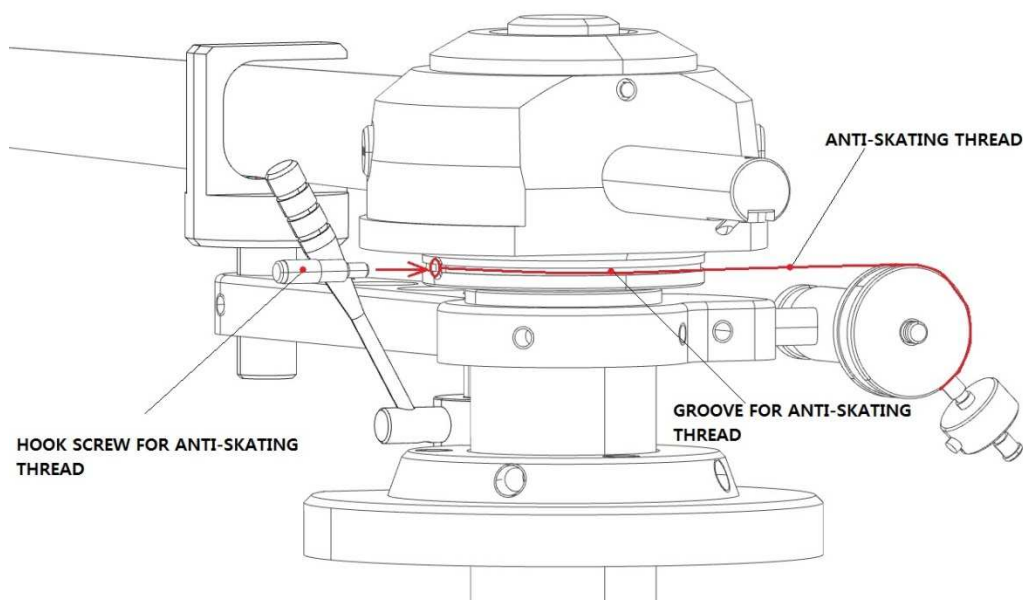


Step 4:

Put the anti-skating sliding mechanism on the end of the anti-skating support rod. The anti-skating thread should fit into the groove in the tonearm.




Be careful when handling the anti-skating thread in order to avoid damaging it.

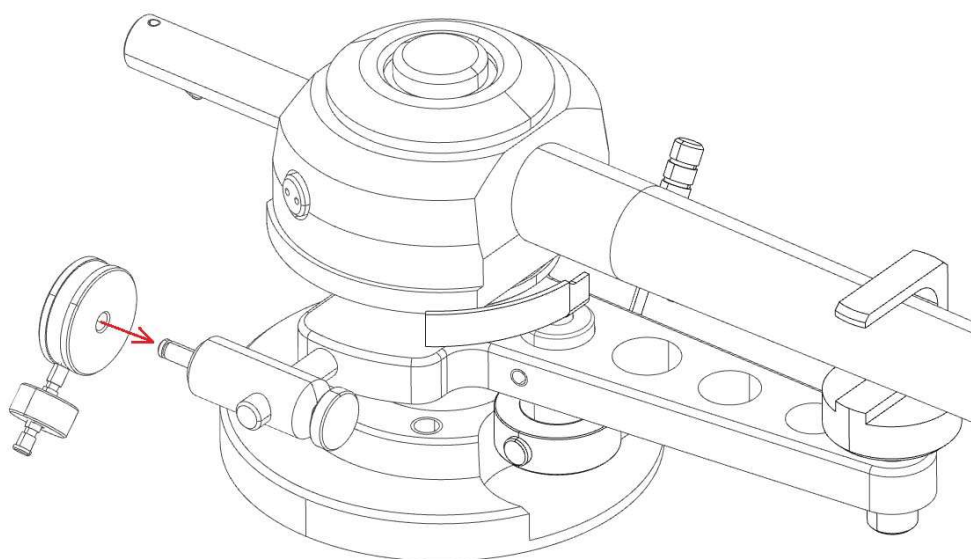

Step 5:

Anti-skating force adjustment:

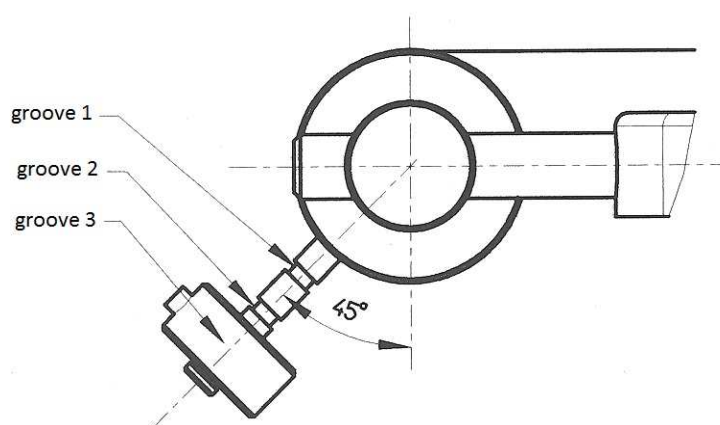

Adjust the anti-skating force by positioning the weight on the appropriate groove of the anti-skating sliding mechanism. Anti-skating downforce should be adjusted in correspondence with the tonearm downforce as follows:


Tonearm downforce:

Lower than 13 mN or 1.3 grams
 14–18 mN or 1.4–1.8 grams
 19–25 mN or 1.9–2.5 grams

Anti-skating groove:

1st groove from bearing
 2nd groove from bearing
 3rd groove from bearing

4. Leveling the turntable

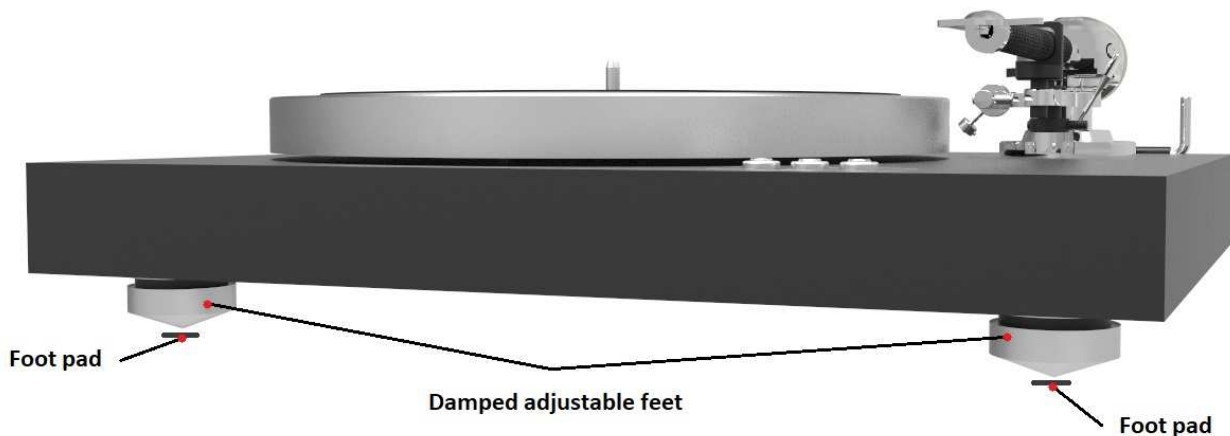

Three precision adjustable damped feet are mounted under the turntable for leveling the turntable. Once the turntable is in final position, put the supplied spirit level on the chassis and then level the turntable by screwing or unscrewing the feet as needed. It is advisable to check level from several positions on the chassis.





Don't forget to put foot pads under the spike feet to avoid damage of the furniture.

5. Starting the motor, changing the speed

Controlling the turntable using the speed control buttons:

- To start rotation of the platter, press either the button labeled **33** or **45**, depending on the speed of the record to be played, 33 rpm or 45 rpm.
- When you want to stop the turntable, or when it is not in use, switch it to **STANDBY** mode by pressing the button labeled **Stby**.

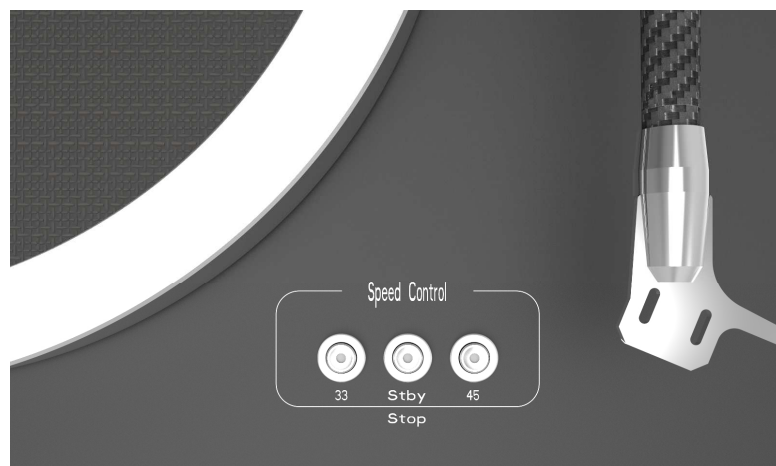

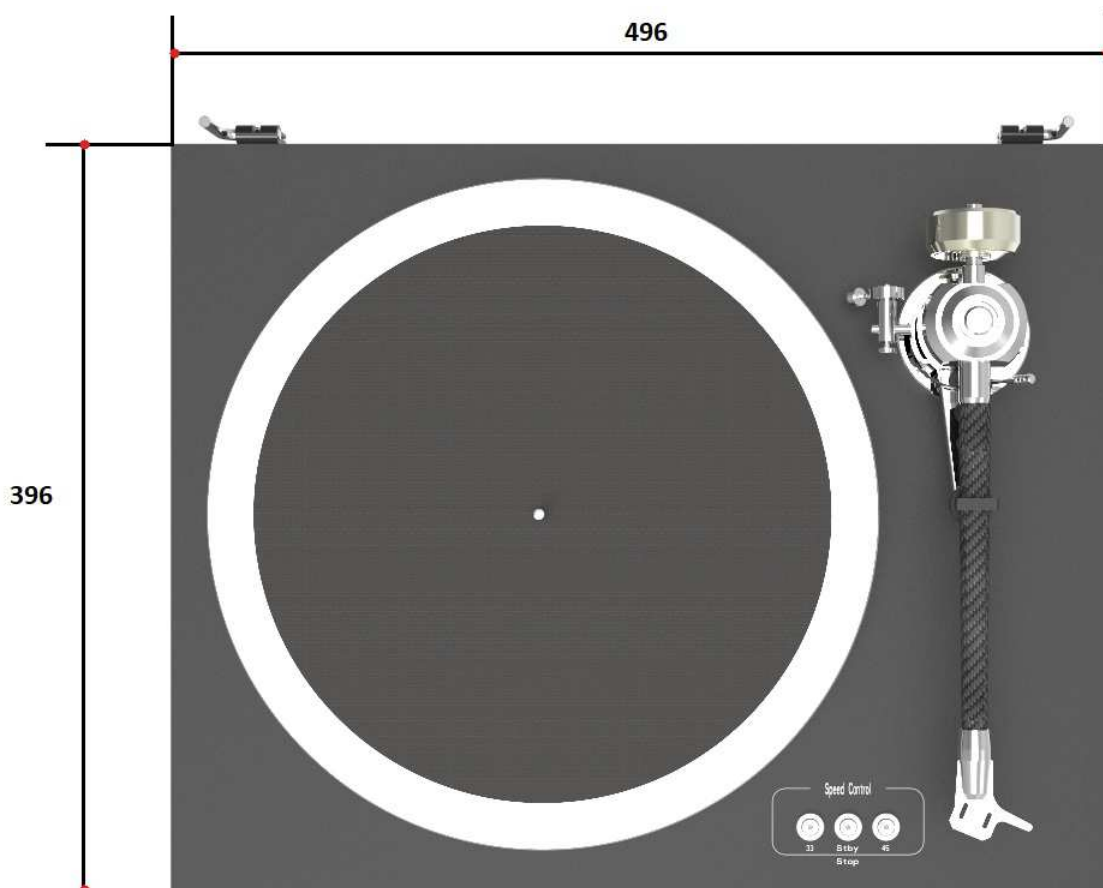

Accessory list:

1. Instructions for use
2. White cotton gloves
3. Cloth
4. Allen key 1.3mm, 1.5mm, 2mm, 3mm
5. Anti-skating mechanism
6. Counterweight
7. Counterweight insert
8. Universal power supply
9. Connect IT E 5P signal cable
10. Drive belt
11. Single adaptor
12. Foot pads

6. Technical Specifications E.A.T. C-Dur

Model	C-DUR
Nominal speed	33/45 rpm , driven by microprocessor, lighted control buttons
Speed variance	33rpm: $\pm < 0.08\%$, 45rpm: $\pm < 0.09\%$
Wow and flutter	33rpm: $\pm < 0.01\%$, 45rpm: $\pm < 0.01\%$
Signal to noise	S/N Ratio (mechanical noise): - 40 dB S/N Ration (electrical noise): -70 dB
Downforce range	0 - 30 mN 0 - 3.0 grams
Supplied counterweight system	Counterweight 125 g without additional insert → for cartridges 5 - 9 g Counterweight with additional insert 142 g →for cartridges 8.5 - 13 g
Effective tonearm mass	16.5 g
Effective tonearm lenght	254 mm

Overhang	16 mm
Power consumption	8.5 W max/ 0.5W standby
Voltage	Universal swith mode power supply 15 V DC/1.6 A, 90-264 V AC, 47 - 63Hz
Dimensions (W x H x D)	496 x 170 x 396 mm
Weight (without box)	15.6 kg (turntable)
Weight (with box)	21 kg

Troubleshooting

The platter doesn't turn although the unit is switched on:

- The unit is not connected to the mains power supply (the building's electrical system).
- No mains power is being delivered at the socket.
- The drive belt is not fitted properly or has slipped off.

No signal through one or both channels:

- No signal contact from the cartridge to the internal tonearm wiring; or from that to the arm lead; or from that to the phono box; or between that and the amplifier. This could be due to a faulty plug, broken wire or loose solder joint in the plug/socket connection.
- Phono input not selected at amplifier.
- Amplifier not switched on.
- Amplifier or speakers are defective or muted.
- No connection to the loudspeakers.

Strong hum on phono input:

- No ground connection from cartridge or arm or arm cable to amplifier, or ground loop.

Distorted or inconsistent sound from one or both channels:

- Turntable is connected to wrong input of amplifier, or MM/MC switch is incorrectly set. Needle or cantilever damaged. Wrong rpm; drive belt overstretched or dirty; platter bearing needs lubrication or is dirty or damaged.

Service

Should you encounter a problem that you are not able to identify or alleviate despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved should the unit be sent to the responsible distributor in your country.

Guarantee repairs will only be effected if the unit is returned in appropriate packaging. For this reason we recommend keeping the original packaging.

Never return a turntable without making sure that it is properly disassembled and correctly packaged in the original packaging according to the supplied diagram. Please: Remove the feet, counterweight, platter, cartridge and belt and pack them separately. Fit the cartridge protection cap. Insert the transport lock for the tonearm prior to carefully packaging the turntable.

Warranty

The manufacturer accepts no responsibility for damage caused by failing to adhere to these instructions for use and/or by transportation without the original packaging. Modification or change to any part of the product by unauthorized persons releases the manufacturer from any liability over and above the lawful rights of the customer.

The information above was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specifications without prior notice as deemed necessary to uphold the ongoing process of technical development.

E.A.T. European Audio Team is a Registered Trademark of Jozefina Lichtenegger.

This guide was produced by: E.A.T. European Audio Team. Copyright © 2022. All rights reserved

