

ADX12 / ADX18 CONDENSER MICROPHONES

ADX12/ADX18

OVERVIEW:

The ADX12 and ADX18 are professional miniature gooseneck condenser microphones designed for applications such as podium, presentation, meetings and teleconferencing. Known for their clarity, excellent sound quality and ease of operation, the ADX12/18 will accurately capture and reproduce vocals from a comfortable distance.

The ADX12/18 are characterized with a uniformly controlled cardioid polar pattern, helping to isolate the speaker from other ambient noise in the room or on the stage. The ADX12/18 mics are also available in a hypercardioid polar pattern (models ADX12HC and ADX18HC) for tighter pick-up control. With a wide frequency range of 40 Hz - 18 kHz, the ADX12/18 provide natural sound with exceptional transient response.

The ADX12/18 mics are equipped with an integrated preamp circuitry built into the base of the XLR and may be mounted permanently via the supplied flange mount or with an optional base with an internal shock mount (SMT1218R). The mics may also be used on a standard mic stand or in conjunction with the Audix ATS-10 table stand with lighted on-off switch. Manufactured with very high standards and tight tolerances, the ADX12/18 features a machined brass body, field replaceable capsule and a variety of optional accessories. The ADX12/18 operate on phantom power of 18 - 52 Volts and are available in non-reflective black matte finish.

SUPPLIED ACCESSORIES:

Flange table mount (TM1218)
External foam windscreen (WS1218)

OPTIONAL ACCESSORIES:

ATS1 - Table Base with programmable on/off switch
ATS1-LOGIC - Same as above, with Logic
ATS10 - Table Base with on/off switch
SMT1218R - Rubber insulated shockmount
DCLIP - Mic stand adapter
APS 2 - Two-channel phantom power supply



FEATURES:

- Natural accurate sound
- Interchangeable capsule
- Low profile design
- Dual gooseneck sections allows for precise positioning
- Low noise electronics
- Available with cardioid or hypercardioid polar pattern

APPLICATIONS:

- Pulpit, podium
- Board meetings, teleconferencing
- Video, recording
- Room security or monitoring

REPLACEMENT CAPSULES:

- CPS1218 - Cardioid in black
- CPS1218HC - Hypercardioid in black



ATS1



APS 2



SMT1218R




DCLIP

ADX12 / 18

SPECIFICATIONS:

Transducer Type	Pre-Polarized Condenser
Frequency Response	40 Hz - 18 kHz
Polar Pattern	Cardioid
	Hypercardioid
	(ADX12-HC or ADX18-HC)
Output Impedance	150 Ohms balanced
Sensitivity	25 mV / Pa @ 1k
Equivalent Noise Level	28 dB (A weighted)
Signal to Noise Ratio	66 dB
Power Requirements	18 - 52 Volts phantom
Maximum SPL	≥120 dB
Cable/Connector	3 pin gold plated
	male XLR connector
Polarity	Positive pressure on
	diaphragm produces
	positive voltage on pin
	2 relative to pin 3
Housing/Finish	Machined Aluminum and Brass /
	Black matte
Weight	113 g / 4 ounces (ADX12)
	159 g / 5.6 ounces (ADX18)
Length	403 mm / 16 inches (ADX12)
	558 mm / 22 inches (ADX18)

FREQUENCY / POLARS:

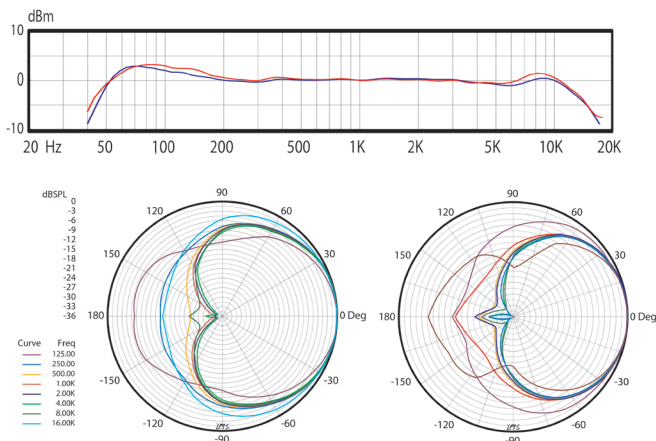

***All specifications subject to change without notice.

SERVICE AND WARRANTY:

This microphone is under warranty for a period of 3 years from any and all manufacturing defects. Should your microphone fail in any way, please contact the Audix Service department at 503-682-6933. A Return Authorization number is required before returning any products.

CARE AND MAINTENANCE:

The ADX12 & ADX18 is manufactured to exacting specs with roadworthy construction. However, the capsule is highly sensitive and should be handled with care. Avoid extreme temperatures and be sure to store your microphone in the pouch provided when not in use. Moisture of any kind can adversely affect the sound and performance of your microphone.

ARCHITECTS AND ENGINEERS SPECIFICATIONS:

The microphone shall be of the condenser type with a modular threaded capsule. The microphone shall be available in a cardioid and hypercardioid polar pattern and shall have a base terminating in a male XLR plug. The microphone shall operate on 18 - 52 Volts phantom power. The microphone shall have a sensitivity of 25mV/ Pa and a nominal impedance of 150 ohms at 1 kHz. The microphone shall have a maximum SPL level of ≥120 dB and shall be fabricated from aluminum tubing, brass fittings, and coiled steel gooseneck material. The microphone capsule shall be 12 mm and available in two lengths: 403 mm and 558 mm. The microphone shall be the Audix ADX12 and ADX18.

OPERATION AND MAINTENANCE:

The ADX12/18 are low impedance microphones and should be plugged into a "mic level" input on your console, mixer, or recording device. The ADX12/18 require phantom power and will NOT operate without phantom power voltage (minimum of 18 - 52 Volts) which is available on most professional mic preamps and mixing devices. Avoid plugging or unplugging the microphone from a PA system unless the channel is muted or the volume of the system turned down. Failure to do so may result in a loud "popping" noise which could seriously damage the speakers in the PA system.

Changing Capsules: Capsules can easily be interchanged by simply screwing them on and off the capsule housing. **Important:** The small copper lead on the housing must make contact with the small pin underneath the capsule in order to work. The lead contact can be stretched gently by hand if necessary.

Permanent Installation: The ADX12/18 can be conveniently plugged into any standard XLR female connector or receptacle. For permanent installation onto a table, podium or flat surface, use the supplied flange shockmount. The base of the ADX12/18 will fit securely into the flange and a standard XLR-f microphone cable or panel jack may be used. If further shockmount or isolation is required, it is recommended to use the optional SMT1218R rubber shockmount which requires boring out a 2 inch hole.

USER TIPS:

Speaking distance and angle of microphone: The two flexible portions of the microphone will enable you to position the mic according to height and speaking style of the user. In general, the microphone can be angled at 60-75 degrees towards the speaker and be 12-16 inches away from the mouth. A shorter distance can be used for a fuller sound or for weaker voices, but avoid getting too close to the microphone element.


Windscreens: The supplied windscreens should be used to help minimize pop noise and breath noise. If breath or pop noise appears to be excessive, either move further away from the microphone or try speaker over the top of the microphone rather than directly into it.

Using with Table Stand: For ultimate flexibility and portability, the optional ATS1, ATS1 LOGIC or the ATS 10 heavy duty table stands are available. Since the electronics for the ADX12/18 are built right into the base of the microphone, all that is necessary is to plug the mic directly into the table stand connector on the top of the base. The mic cable will be plugged into the back of the base and connected to a low impedance mic level input on the mixer or recording device. Remember that phantom power is required in order to operate. There is a noiseless 2 position on-off switch located in the table stand. The down position is 'on' and the up position is 'off'. The LED indicator light will be lit when the mic is turned on. This is not a push-to-talk system so you need not hold down the switch, just push and click to on or off position. A standard XLR-XLR microphone cable can be used to connect the ATS 10 to the mixer or recording device.

To use on microphone stand: The ADX12/18 may be used on any standard microphone stand by using the D-Clip. The XLR base of the microphone will snap securely into the D-Clip and can be used at any angle.

*Further miking techniques may be found on our website at www.audixusa.com

DIMENSIONS (mm):

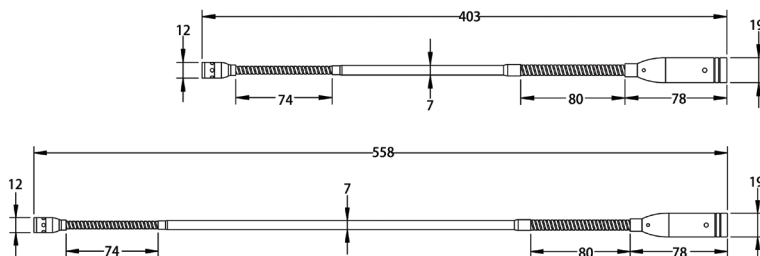

www.audixusa.com

503-682-6933 Fax: 503-682-7114

Audix Corporation 9400 SW Barber St. Wilsonville, OR 97070



AUDIX WARRANTY REGISTRATION FORM

Name: _____ Model: _____
 Company: _____ Serial Number: _____
 Address: _____ Store: _____
 City: _____ Store Location: _____
 Prov./State: _____ Zip: _____ Purchase Date: _____
 Phone: () _____ Signature: _____
 Email: _____ Date: _____

Please register your product online at www.audixusa.com or mail this form to:
 Audix Microphones P.O. Box 4010 Wilsonville, OR 97070

Please Check all that apply:

☐ Male ☐ Female

Age:

- ☐ 18 or Under
☐ 19-25
☐ 26-35
☐ 36-45
☐ 46-55
☐ 55 +

Occupation:

- ☐ Musician
☐ Producer
☐ Sound Eng.
☐ Radio/TV
☐ Production
☐ Other _____

Primary Instruments:

- ☐ Vocal
☐ Guitar / Bass
☐ Drums
☐ Keyboard
☐ Brass
☐ Woodwinds
☐ Strings
☐ Other _____

Product to be used for:

- ☐ Pro live sound
☐ Pro recording
☐ Home recording
☐ Rehearsal
☐ Installation
☐ School
☐ House of Worship
☐ Other _____

How did you hear about Audix?

- ☐ Magazine Ad ☐ Online Ad
☐ On-line ad ☐ Radio/TV
☐ Salesman ☐ Other _____

Do you own other Audix Products? ☐ Yes ☐ No

Model(s) _____

Have you visited the Audix website? ☐ Yes ☐ No